Kramer Electronics, Ltd.

USER MANUAL

Model:

VS-1616D

16x16 Digital Matrix Switcher

Contents

1	**Introduction**	**1**
2	**Getting Started**	**2**
2.1	Quick Start	2
3	**Overview**	**4**
3.1	Recommendations for Best Performance	5
3.2	Safety Instructions	5
3.1	Shielded Twisted Pair/Unshielded Twisted Pair	5
3.2	About the Power Connect™ Feature	6
3.3	Recycling Kramer Products	6
4	**Defining the VS-1616D 16x16 Digital Matrix Switcher**	**6**
4.1	Using the IR Transmitter	10
5	**Installing the VS-1616D in a Rack**	**11**
6	**Connecting the VS-1616D 16x16 Digital Matrix Switcher**	**12**
6.1	Port Numbering	13
6.1.1	EDID Numbering Examples	14
6.2	Serial Data Flow on DGKat Plus RS-232 Cards	14
6.3	Audio Mode Selection on HDMI plus Audio Cards	15
6.4	Connecting to the VS-1616D via RS-232	15
6.5	Connecting to the VS-1616D via Ethernet	16
6.5.1	Connecting the Ethernet Port directly to a PC	16
6.5.2	Connecting to the Ethernet Port via a Network Switch/Hub	18
7	**Operating Your Video Matrix Switcher**	**19**
7.1	Startup Display	19
7.1.1	Viewing the Display	20
7.2	Using the Selector Buttons	20
7.3	Confirming Actions	20
7.3.1	Toggling between the At Once and Confirm Modes	21
7.3.2	Confirming a Switching Action	21
7.4	Switching Actions	21
7.4.1	Switching one Input to one Output	22
7.4.2	Switching Several Inputs to Several Outputs	22
7.4.3	Turning an Output Off	23
7.4.4	Turning Off Several Outputs	23
7.4.5	Recalling the Default Setup	23
7.5	Locking the Front Panel Buttons	24
8	**Using the Configuration Menus**	**24**
8.1	Using the Setup Menu	26
8.1.1	Setup Menu—1: inXX=>ALL, Switching one Input to all Outputs	26
8.1.2	Setup Menu—3: outXX=>OFF, Turning an Output Off	26
8.1.3	Setup Menu—7: EDID, Assignment to an Input	27

8.1.4	Setup Menu—9: Delay, Setting for an Output	28
8.1.5	Setup Menu—4: store setup XX, Storing the Setup in a Preset	28
8.1.6	Setup Menu—6: recall setup XX, Recalling a Preset	29
8.2	Using the Config Menu	29
8.2.1	Config Menu—Input Signal Detection Display	30
8.2.2	Config Menu—Input Port Parameter Setting	31
8.2.3	Config Menu—Output Load Detection Display	33
8.2.4	Config Menu—Output Port Parameter Setting	34
8.2.5	Config Menu—Interface Configuration	36
8.2.6	Config Menu—Interface Reply Configuration	36
8.2.7	Config Menu—Protocol Switching	37
8.2.8	Config Menu—Store Default Setup	37
8.2.9	Config Menu—Total Matrix Reset	38
8.2.10	Config Menu—Display Firmware Versions	39
9	**Configuring the Number of Installed Input and Output Ports**	**39**
10	**Installing and Using the Test Module to Troubleshoot Video Problems**	**40**
10.1	Installing the Test Module	40
10.2	Setting the Resolution of the Generated Video	40
10.3	Setting the Pattern of the Generated Video	41
10.4	Using the Test Module to Troubleshoot Video Problems	41
10.4.1	Testing the Projector Output	42
10.4.2	Testing the Output Signal Path to the Projector	42
10.4.3	Testing the Input and Output Signal Path to the Projector	43
11	**I/O Card Hardware Installation Instructions**	**43**
12	**Upgrading the VS-1616D Firmware**	**44**
13	**Technical Specifications**	**45**
14	**Default Communication Parameters**	**47**
15	**Factory Default EDID**	**47**
15.1	DVI Input Card	47
15.2	HDCP Input Card	48
15.3	HDMI Input Card	50
15.4	HDMI plus Audio Input Card	52
15.5	DVI Dual Channel Input Card	53
15.6	DGKat Input Card	55
15.7	HDBaseT Input Card	57
15.8	VGA Input Card	59
16	**Communication Protocols**	**60**
16.1	Protocol 3000	60
16.1.1	Kramer Protocol 3000 Syntax	60
16.1.2	Device Message Format	60
16.1.3	Command Terms	61
16.1.4	Entering Commands	61
16.1.5	Command Forms	62

16.1.6 Chaining Commands 62
16.1.7 Maximum String Length 62
16.1.8 Table of Protocol 3000 Commands 62
16.2 Protocol 2000 63

Figures

Figure 1: VS-1616D 16x16 Digital Matrix Switcher Front Panel 7
Figure 2: VS-1616D Front Panel Numeric Keypad 8
Figure 3: VS-1616D 16x16 Digital Matrix Switcher Rear Panel Showing DVI cards 9
Figure 4: Connecting the VS-1616D 12
Figure 5: Sample Port Numbering 13
Figure 6: EDID Numbering Assignment 14
Figure 7: DGKat Card Serial Data Transmission 15
Figure 8: Audio Mode Selection on HDMI plus Audio Cards 15
Figure 9: Local Area Connection Properties Window 17
Figure 10: Internet Protocol (TCP/IP) Properties Window 18
Figure 11: Default Startup Status Display Sequence 19
Figure 12: Menu Tree 25
Figure 13: Resolution DIP-switch 41
Figure 14: Signal Paths for Isolating problems 42
Figure 15: Inserting the Card into a Slot 43
Figure 16: Card Handles 44

Tables

Table 1: VS-1616D 16x16 Digital Matrix Switcher Front Panel Features 8
Table 2: VS-1616D Front Panel Numeric Keypad Labels 8
Table 3: VS-1616D 16x16 Digital Matrix Switcher Rear Panel Features 10
Table 4: Port Numbering 13
Table 5: EDID Configuration Requests and Results 14
Table 6: Audio Mode DIP-switch Operation 15
Table 7: Available PC Resolutions for Generated Video (Jumper off) 41
Table 8: Available HD Resolutions for Generated Video (Jumper on, default) 41
Table 9: Technical Specifications of the 16x16 Digital Matrix Switcher 45
Table 10: Technical Specifications of VS-1616D Compatible Cards 46
Table 11: Default Communication Parameters for the VS-1616D 47
Table 12: Hex Table (IN 1-16 to OUT 1-16) 63

1 Introduction

Welcome to Kramer Electronics! Since 1981, Kramer Electronics has been providing a world of unique, creative, and affordable solutions to the vast range of problems that confront the video, audio, presentation, and broadcasting professional on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better! Our 1,000-plus different models now appear in 11 groups[1] that are clearly defined by function.

Congratulations on purchasing your Kramer **VS-1616D** *16x16 Digital Matrix Switcher*. This product is ideal for the following typical applications:

- Professional display systems requiring video signal routing
- Broadcast, presentation and production facilities, as well as monitoring in large duplication systems
- Rental/staging applications

The package includes the following items:

- **VS-1616D** *16x16 Digital Matrix Switcher*
- Power cord
- Kramer **RC-IR3** infrared remote control transmitter (including the required batteries and a separate user manual[2])
- This user manual[2]

Note: Throughout this user manual the chassis configuration is shown with 16 DVI inputs and 16 DVI outputs as a representation only. The following cards are available and may be mixed in the same chassis:

- DVI
- DVI dual link
- DVI (HDCP)
- DVI (over 4LC fiber optic cable)
- DVI (over fiber optic cable) with 670 module (HDCP)
- HDMI (HDCP)
- HDMI plus analog audio (HDCP)
- HDMI plus digital audio (HDCP)
- HDMI plus RS-232 (HDCP)
- HDBaseT plus IR and RS-232 plus Ethernet
- VGA

1 GROUP 1: Distribution Amplifiers; GROUP 2: Switchers and Routers; GROUP 3: Control Systems; GROUP 4: Format/Standards Converters; GROUP 5: Range Extenders and Repeaters; GROUP 6: Specialty AV Products; GROUP 7: Scan Converters and Scalers; GROUP 8: Cables and Connectors; GROUP 9: Room Connectivity; GROUP 10: Accessories and Rack Adapters; GROUP 11: Sierra Products

2 Download up-to-date Kramer user manuals from http://www.kramerelectronics.com

2 Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment
- Review the contents of this user manual

2.1 Quick Start

The following quick start chart summarizes the basic setup and operation steps.

Step 1: Mount the device - see Section 5

Mount the device in a rack or stick the 4 rubber feet to the underside

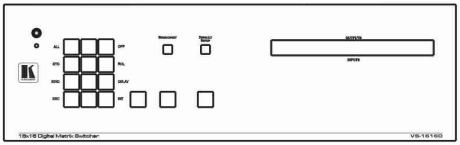

Step 2: Connect the inputs and outputs - see Section 2

1. Connect up to 16* inputs
2. Connect up to 16* outputs
3. Optional—Connect a PC via RS-232 and/or Ethernet for remote control

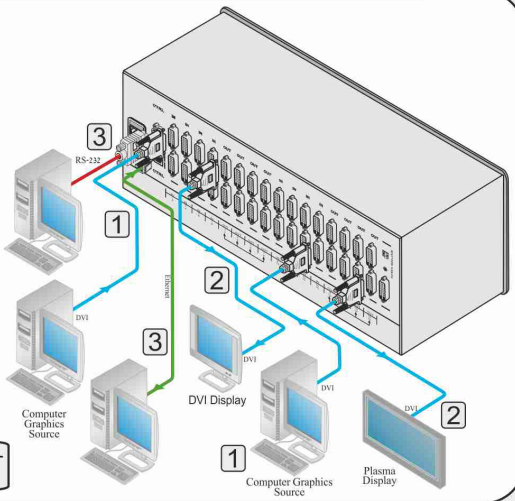

* Your maximum number of ports may vary - see Section 9

Step 3: Connect to a controller - see Section 6

If required, connect a controller via the RS-232 and/or the Ethernet port

Step 4: Turn the power on

Step 5: Configure the device - see Section 8

Use the Setup and Config menus to set the device configuration

Step 6: Operate the device - see Section 7

Operate the device using the front panel buttons, IR remote control, RS-232 and Ethernet

3 Overview

The Kramer **VS-1616D** is a high performance matrix switcher chassis that supports up to 16 x 16 ports[1] for various signals (depending on the type of cards installed). It features a very high bandwidth[2] of up to 3.2Gbps (for the chassis only, effective bandwidth of the system depends on the I/O cards) that ensures transparent performance even in the most critical applications. The cards re-clock and equalize the signals and the chassis can route any or all inputs to any or all outputs simultaneously.

The **VS-1616D** is highly configurable–you can add or remove inputs and outputs independently in groups of two and mix different types of input/ouput cards in the same chassis. For example, you can configure a device as a 4 x 12 or a 16 x 8 matrix switcher to exactly suit your needs.

The **VS-1616D** features:

- Full 16 x 16 non-blocking matrix array to switch any of the 16 input digital signals to any or all outputs (see Section 6)
- Easy access to 59 preset memory locations for quick access to user-defined setups
- The Kramer 2000 Protocol for serial control
- A 40 character by 2 line LCD that shows the operational status or the configuration menu
- A lock function to prevent tampering with the front panel
- A default EDID (Extended Display Identification Data) for each input
- I-EDIDPro™ Kramer Intelligent EDID Processing™ – Intelligent EDID handling and processing algorithm ensures plug and play operation for DVI systems
- Non-volatile EDID storage
- Kramer Core™—flexible infrastructure conversion. Copper, fiber or Twisted Pair, all can be used at the same time according to input/output module selection. The matrix receives signals from compatible Kramer transmitters, automatically converts between available infrastructure options and sends the signals to compatible Kramer receivers
- Equalization and re-clocking on all card types

You can operate the **VS-1616D** via the front panel buttons[3] or remotely via:

- RS-232 serial commands transmitted by a touch screen system, PC or other serial controller

1 Can also be configured for other sizes (up to a maximum of 16 x 16)

2 For maximum bandwidth supported by each type of card see the Technical Specifications in Section 13

3 The VS-1616D is a sophisticated device but has been designed to be as simple as possible to operate. Due to space limitations on the front panel 32 input/output selector buttons are instead substituted by a keypad. For details of how to route inputs to outputs, see Section 7.2

- Ethernet over a LAN
- The infrared remote control transmitter

The **VS-1616D** is housed in a 19" rack-mountable enclosure.

To achieve the best performance:

- Connect only good quality connection cables, thus avoiding interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables)
- Avoid interference from neighboring electrical appliances that may adversely influence signal quality and position your Kramer **VS-1616D** in a location free from moisture and away from excessive sunlight and dust

3.1 Recommendations for Best Performance

To achieve the best performance:

- Use only good quality connection cables (we recommend Kramer high-performance, high-resolution cables) thus avoiding interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables)
- Do not secure the cables in tight bundles or roll the slack into tight coils
- Avoid interference from neighboring electrical appliances and position your **VS-1616D** away from moisture, excessive sunlight and dust

This equipment is to be used only inside a building. It may only be connected to other equipment that is installed inside a building.

3.2 Safety Instructions

Caution: No operator serviceable parts inside the unit

Warning: You use only the power cord that is supplied with the unit. Do not open the unit. High voltages can cause electrical shock! Servicing by qualified personnel only.

Warning: Disconnect the power and unplug the unit from the wall before installing

3.1 Shielded Twisted Pair/Unshielded Twisted Pair

Kramer engineers have developed special twisted pair cables to best match our digital twisted pair products; Kramer's **BC-DGKat524**, **BC-DGKat623** and **BC-DGKat7a23** shielded twisted pair (STP) cables. These specially built cables significantly outperform regular CAT 6 and CAT 7a cables.

3.2 About the Power Connect™ Feature

The Power Connect™ feature here means that the **VS-1616D** can supply power to the TP transmitters and receivers (for example, the **PT-573** and **PT-574**) as long as the devices are within 90m (270ft) of each other. The Power Connect™ feature applies as long as the cable can carry power and the distance does not exceed 90m on standard CAT 5 cable. For longer distances heavier gauge cable should be used[1].

3.3 Recycling Kramer Products

The Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC aims to reduce the amount of WEEE sent for disposal to landfill or incineration by requiring it to be collected and recycled. To comply with the WEEE Directive, Kramer Electronics has made arrangements with the European Advanced Recycling Network (EARN) and will cover any costs of treatment, recycling and recovery of waste Kramer Electronics branded equipment on arrival at the EARN facility. For details of Kramer's recycling arrangements in your particular country go to our recycling pages at *http://www.kramerelectronics.com/support/recycling/*.

4 Defining the VS-1616D 16x16 Digital Matrix Switcher

Figure 1, Table 1, Figure 2 and Table 2 define the front panel of the **VS-1616D**.

1 CAT 5 cable is still suitable for the video/audio transmission, but not for feeding the power at these distances

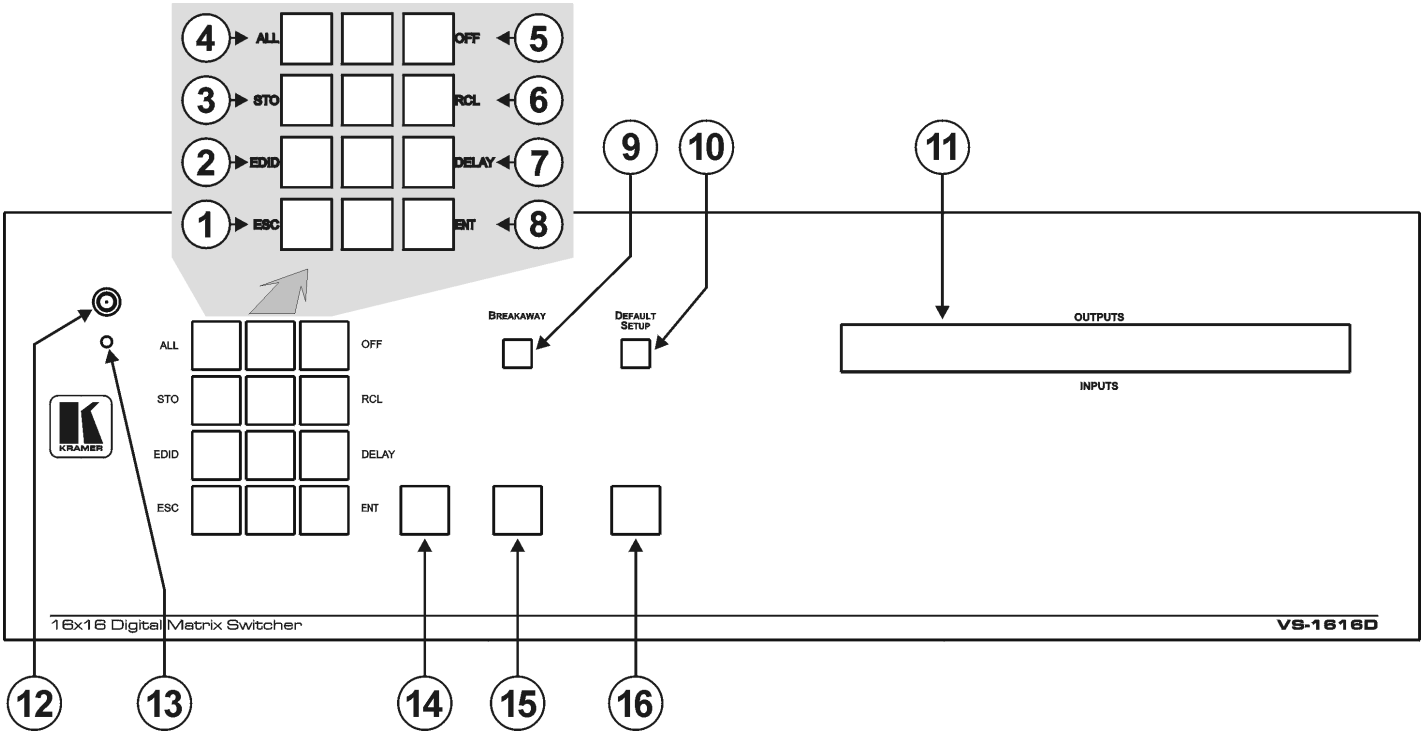

Figure 1: VS-1616D 16x16 Digital Matrix Switcher Front Panel

Note: Buttons 14, 15 and 16 function as the TAKE, MENU and LOCK buttons respectively

Table 1: VS-1616D 16x16 Digital Matrix Switcher Front Panel Features

#	Feature			Function
1	Double-function Selector Buttons Area	Menu Button Functions	*ESC*	Press to exit the current operation
2			*EDID*	Press to assign EDID channels
3			*STO*[1]	Press to store the current setup in a preset
4			*ALL*[1]	Press to connect an input to all outputs
5			*OFF*[1]	Press to turn off an output
6			*RCL*[1]	Press to recall a preset
7			*DELAY*	Press to set the delay between confirming an action and the execution of the action
8			*ENT*	Press to complete the input-output setup when using a one-digit number instead of two digits[2]. Press to enter the options in a setup menu
9	*BREAKAWAY* Button			Press to exit a Menu (see Section 8)
10	*DEFAULT SETUP* Button			Press to recall the default setup (see Section 7.4.5)
11	*OUTPUTS/INPUTS* LCD Display			Displays the outputs (upper row) switched to the selected inputs (lower row), (see Section 7.1). Displays user interface messages and menus
12	IR Receiver			Infrared remote control sensor
13	IR LED			Lights yellow when receiving commands from the IR remote control transmitter
14	*TAKE* Button			Press to confirm actions (see Section 7.3.2)
15	*MENU* Button			Press once to enable the ALL, OFF, STO and RCL buttons (see Section 8). Press again to enter the configuration menu (see Section 8.2). When in a Menu, press to cycle through the menu items
16	*LOCK* Button			Press and hold for approximately 2 sec to lock/unlock the front panel buttons (see Section 7.5)

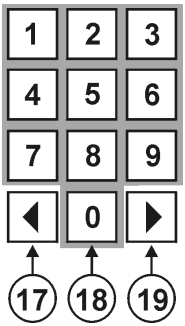

Figure 2: VS-1616D Front Panel Numeric Keypad

Table 2: VS-1616D Front Panel Numeric Keypad Labels

#	Feature	Function
17	◄ (Backward)	Press to shift the sliding window to the right[3]
18	*1, 2, 3, 4, 5, 6, 7, 8, 9, 0*	Numeric keypad, 1 to 0
19	► (Forward)	Press to shift the sliding window to the left[3]

1 After pressing the MENU button, this button lights and is enabled

2 For example, to enter input 5, you can press either ENT, 05 or 5

3 Since the LCD display is large enough to show only 13 cross-points out of a total of 16

Figure 3 and Table 3 define the rear panel of the **VS-1616D** showing DVI cards installed as an example.

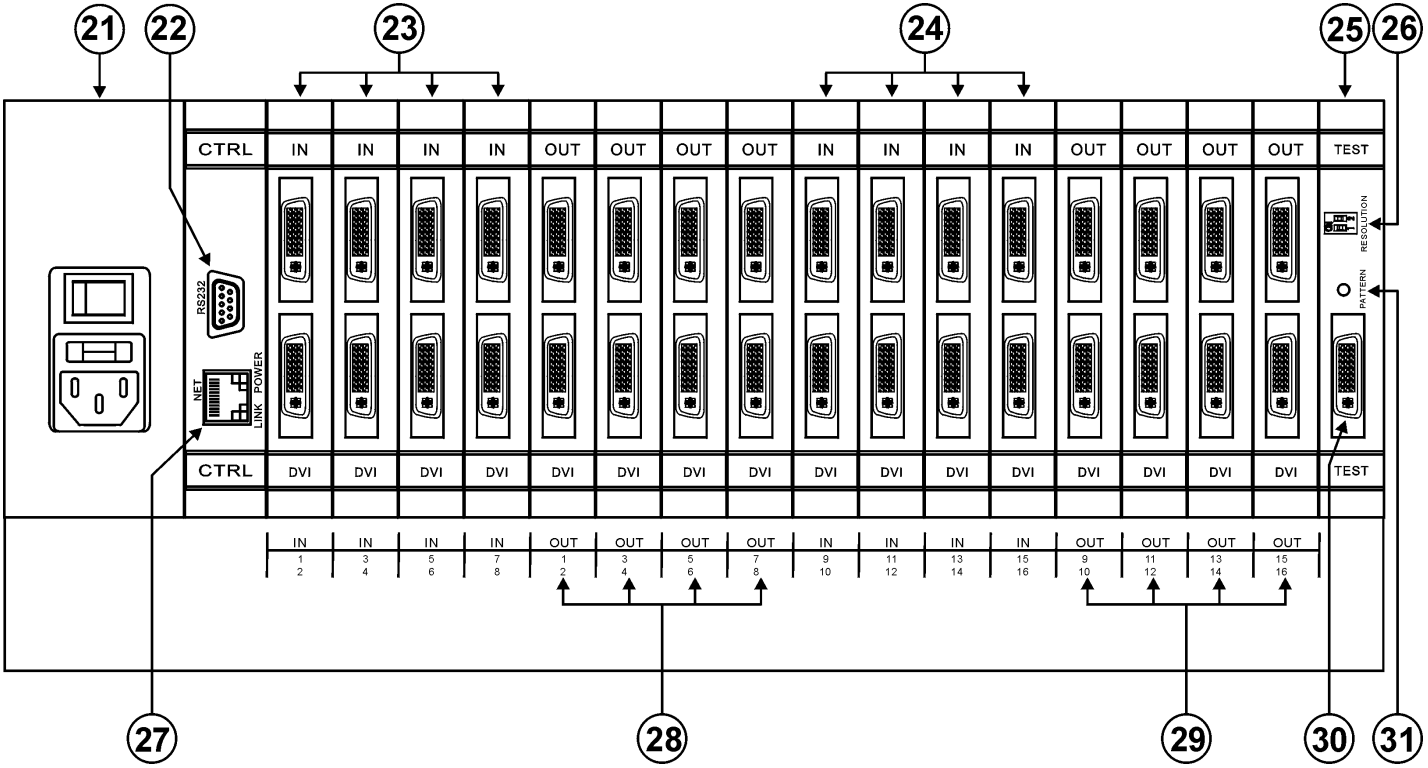

Figure 3: VS-1616D 16x16 Digital Matrix Switcher Rear Panel Showing DVI cards

Table 3: VS-1616D 16x16 Digital Matrix Switcher Rear Panel Features

#	Feature		Function
21	AC Mains Power Module		Fuse holder and power cord socket. Connect to the AC mains supply
22	*RS-232* 9-pin D-sub Port		Connects to the remote operation PC or remote controller[1] (see Section 6.4)
23	*IN 1~4, 5~8* Connectors	INPUTS	Connect to the relevant video sources, depending on the cards installed (1 to 8, see Section 6)
24	*IN 9~12, 13~16* Connectors		Connect to the relevant video sources, depending on the cards installed (9 to 16, see Section 6)
25	*TEST* Module		Signal generator module for testing video outputs (see Section 10)
26	RESOLUTION DIP-switches		Set the resolution for video generated by the Test module (see Section 10.2)
27	*NET* Ethernet RJ-45 Connector		Connect to a PC or controller via the Ethernet LAN (see Section 6.5). *LINK* LED flashes when communication is active. *POWER* LED lights when the interface receives power
28	*OUT 1~4, 5~8* Connectors	OUTPUTS	Connect to the relevant video acceptors, depending on the cards installed (1 to 8, see Section 6)
29	*OUT 9~12, 13~16* Connectors		Connect to the relevant video acceptors, depending on the cards installed (9 to 16, see Section 6)
30	Test Module Output Connector		Connect to one of the relevant video inputs to aid in troubleshooting (see Section 10.4)
31	*PATTERN* Button		Press the button repeatedly to change the video pattern generated by the Test module (see Section 10.3)

4.1 Using the IR Transmitter

You can use the **RC-IR3** IR transmitter to control the machine via the built-in IR receiver on the front panel.

1 If the unit is not the first unit in the line, connects to the RS-232 OUT 9-pin DB port of the previous unit in the line

5 Installing the VS-1616D in a Rack

This section provides instruction on rack mounting the **VS-1616D**.

Before installing in a rack, be sure that the environment is within the recommended range:

OPERATING TEMPERATURE:	0º to +40ºC (32º to 104ºF)
STORAGE TEMPERATURE:	-40º to +70ºC (-40º to 158ºF)
HUMIDITY:	10% to 90%, RHL non-condensing

CAUTION!

When installing on a 19" rack, avoid hazards by taking care that:

1. It is located within the recommended environmental conditions, as the operating ambient temperature of a closed or multi unit rack assembly may exceed the room ambient temperature.

2. Once rack mounted, enough air will still flow around the machine.

3. The machine is placed straight in the correct horizontal position.

4. You do not overload the circuit(s). When connecting the machine to the supply circuit, overloading the circuits might have a detrimental effect on overcurrent protection and supply wiring. Refer to the appropriate nameplate ratings for information. For example, for fuse replacement, see the value printed on the product label.

5. The machine is earthed (grounded) in a reliable way and is connected only to an electricity socket with grounding. Pay particular attention to situations where electricity is supplied indirectly (when the power cord is not plugged directly into the socket in the wall), for example, when using an extension cable or a power strip, and that you use only the power cord that is supplied with the machine.

To rack-mount a machine:

1. Attach both ear brackets to the machine. To do so, remove the screws from each side of the machine (5 on each side), and replace those screws through the ear brackets.

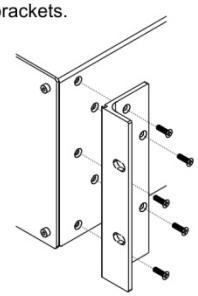

2. Place the ears of the machine against the rack rails, and insert the proper screws (not provided) through each of the four holes in the rack ears.

Note:

- In some models, the front panel may feature built-in rack ears
- Detachable rack ears can be removed for desktop use
- Always mount the machine in the rack before you attach any cables or connect the machine to the power
- If you are using a Kramer rack adapter kit (for a machine that is not 19"), see the Rack Adapters user manual for installation instructions available from our Web site

6 Connecting the VS-1616D 16x16 Digital Matrix Switcher

The configuration of DVI input/output cards shown in Figure 4 is merely an sample representation and different I/O cards may be mixed as required (for limitations, see Page 13). Exactly the same principles apply to installations using other card types.

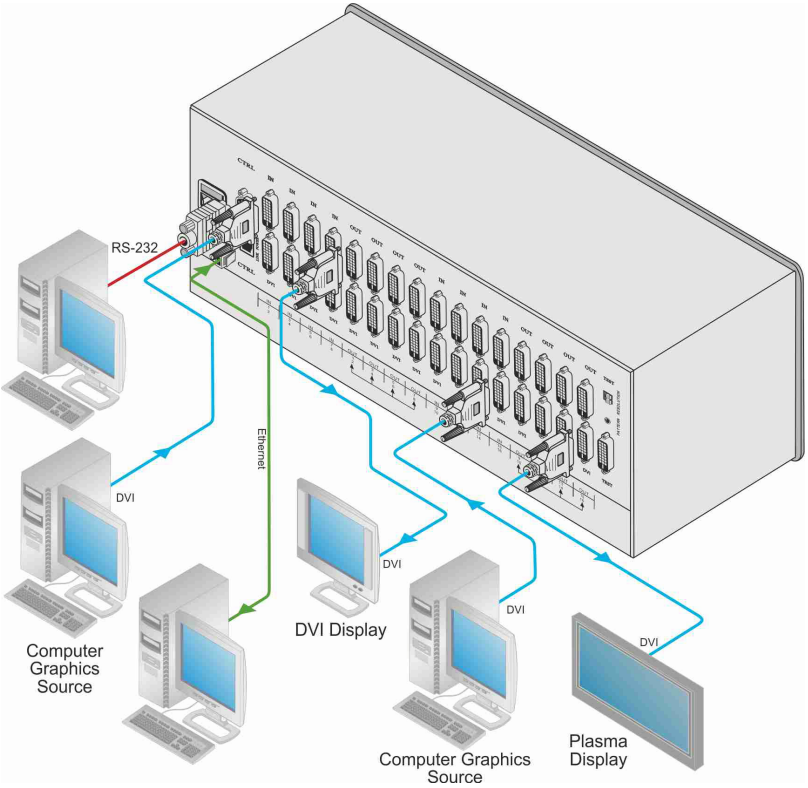

Figure 4: Connecting the VS-1616D

To install[1] the VS-1616D as illustrated in the example in Figure 4:

1. Connect up to 16 DVI video sources (for example[2], computer graphics sources).
2. Connect up to 16 DVI video acceptors, (for example[2], a plasma display and a DVI LCD display).
3. If required, connect a PC or remote controller to the RS-232 port (see Section 6.4) and/or the Ethernet port (see Section 6.5).

1 Switch off the power for each device before connecting it to your VS-1616D

2 In this example only two inputs and two outputs are connected

4. Connect the power cord[1].
5. If necessary, review and set the system configuration using the Menu (see Section 8).

Note: Given an input signal that is HDCP encoded, the **VS-1616D** will output a signal only if the output port to which it is switched supports HDCP.

6.1 Port Numbering

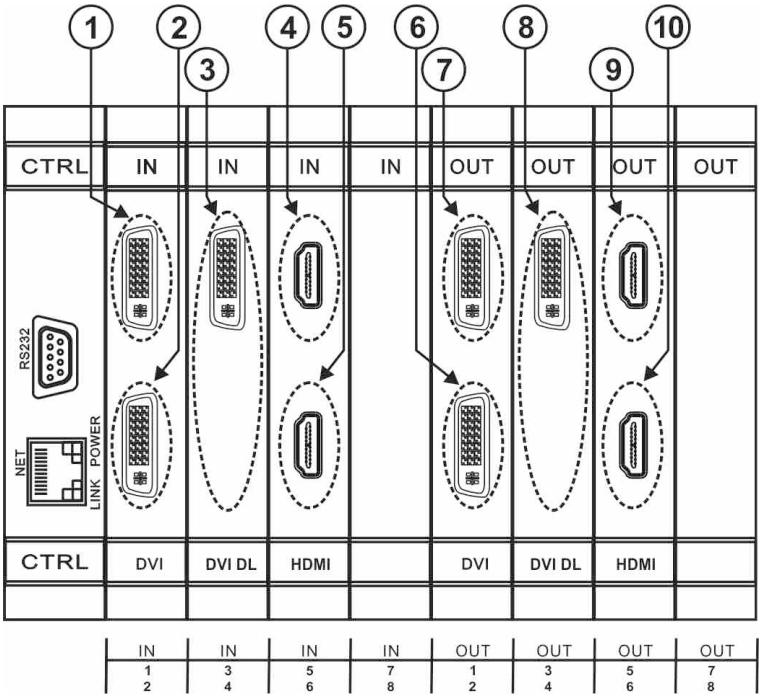

Figure 5: Sample Port Numbering

Table 4: Port Numbering

Diagram #	Actual Port Number	Diagram #	Actual Port Number
1	IN 1	6	OUT 2
2	IN 2	7	OUT 1
3	IN 3	8	OUT 3
4	IN 5	9	OUT 5
5	IN 6	10	OUT 6

Note: There is no IN 4 or OUT 4 because these slots contain DVI dual link cards.

1 We recommend that you use only the power cord that is supplied with the device (not shown in Figure 4)

On all cards apart from the DVI dual link cards, there are two physical ports on each card and numbering of ports is sequential from top to bottom and left to right. Each DVI dual link card provides one physical port which causes the loss of one number in the numbering sequence of that card only. A sample numbering is shown in Figure 5 and explained in Table 4.

6.1.1 EDID Numbering Examples

Table 5 is based on the port numbering shown in Figure 5 and lists requested switching configurations and their results.

Table 5: EDID Configuration Requests and Results

EDID Request	EDID Sent
From OUT 4	Blank (256 bytes of 0xFF)
From IN 8	None (error message displayed)

Note: AV data flow is: **source** > **VS-1616D** > **display**. EDID information flow is: **display** > **VS-1616D** > **source**, which means that the EDID input is the display side and the EDID output is the AV source side. This is the reverse of the AV data flow direction.

When assigning EDIDs, note that the top row of the LCD display labeled OUTPUTS relates to the ports connected to the sources (AV inputs), and the bottom row of the LCD display labeled INPUTS relates to the ports connected to displays (AV outputs).

In Figure 6, the EDID from EDID input 8 (**VS-1616D** Output port 8) has been assigned to all EDID outputs (**VS-1616D** Input ports).

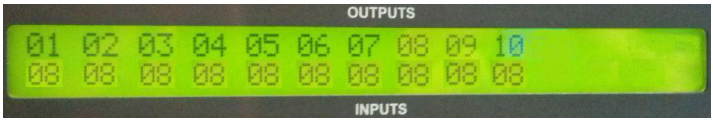

Figure 6: EDID Numbering Assignment

6.2 Serial Data Flow on DGKat Plus RS-232 Cards

Serial data present on the RS-232 port of a DGKat input card is not transmitted via the switcher. This data is transmitted over the TP cable of the same input card (see Figure 7).

Serial data present on the RS-232 port of a DGKat output card is not transmitted via the switcher. This data is transmitted over the TP cable of the same output card.

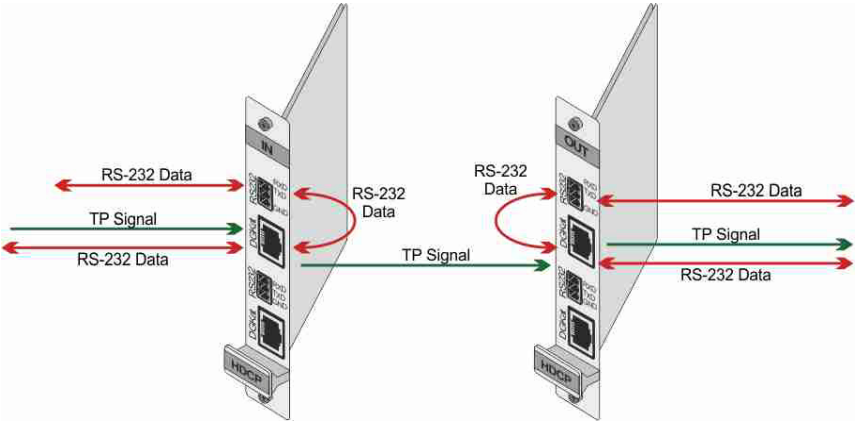

Figure 7: DGKat Card Serial Data Transmission

6.3 Audio Mode Selection on HDMI plus Audio Cards

The Option dip-switches 1 and 2 (see Table 6) control the way audio is handled.



Figure 8: Audio Mode Selection on HDMI plus Audio Cards

Table 6: Audio Mode DIP-switch Operation

DIP-switch #	Description	State	Function
1	Auto/Manual Mode	Off (default)	Automatic—if an audio source is connected to the 3.5mm mini jack the analog (external) audio is transmitted. If not, the embedded audio is transmitted
		On	Manual—DisplayPort and HDMI ports always transmit the embedded audio and the VGA always transmits the analog audio. The DVI port audio is defined by DIP-switch 2
2	DVI Audio Source	Off (default)	Only the DVI uses the embedded audio
		On	Only the DVI uses the analog (external) audio

6.4 Connecting to the VS-1616D via RS-232

You can connect to the **VS-1616D** via an RS-232 connection using, for example, a PC. Note that a null-modem adapter/connection is not required.

To connect to the VS-1616D via RS-232:

- Connect the RS-232 9-pin D-sub rear panel port on the **VS-1616D** unit via a 9-wire straight cable (only pin 2 to pin 2, pin 3 to pin 3, and pin 5 to pin 5 need to be connected) to the RS-232 9-pin D-sub port on your PC

6.5 Connecting to the VS-1616D via Ethernet

You can connect the **VS-1616D** via Ethernet using a crossover cable (see Section 6.5.1) for direct connection to the PC, or a straight through cable (see Section 6.5.2) for connection via a network hub or network router[1].

6.5.1 Connecting the Ethernet Port directly to a PC

You can connect the Ethernet port on the **VS-1616D** to the Ethernet port on your PC via a crossover cable with RJ-45 connectors.

This type of connection is recommended for identification of the factory-default IP Address of the **VS-1616D** during the initial configuration

To configure your PC after connecting the Ethernet port:

1. Right-click the **My Network Places** icon on your desktop.
2. Select **Properties**.
3. Right-click **Local Area Connection Properties**.
4. Select **Properties**.
   The **Local Area Connection Properties** window appears.
5. Select the **Internet Protocol (TCP/IP)** and click the **Properties** Button.

1 After connecting the Ethernet port, you have to install and configure your Ethernet Port. For detailed instructions, see the Ethernet Configuration Guide (Lantronix) in the technical support section on our Web site http://www.kramerelectronics.com

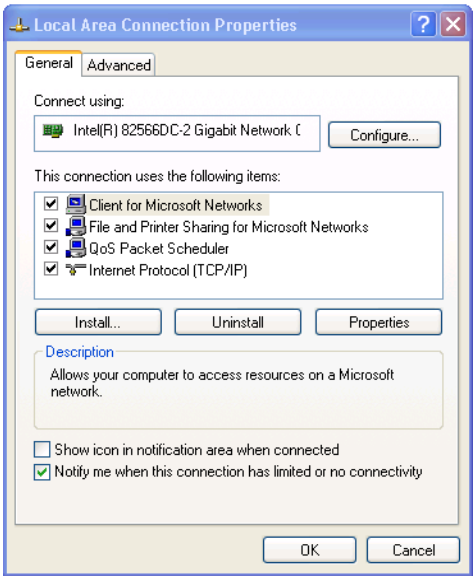

Figure 9: Local Area Connection Properties Window

6. Select **Use the following IP Address** and enter the details as shown in Figure 10. You can use any IP address in the range 192.168.1.1 to 192.168.1.255 (excluding 192.168.1.39) that is provided by your IT department.

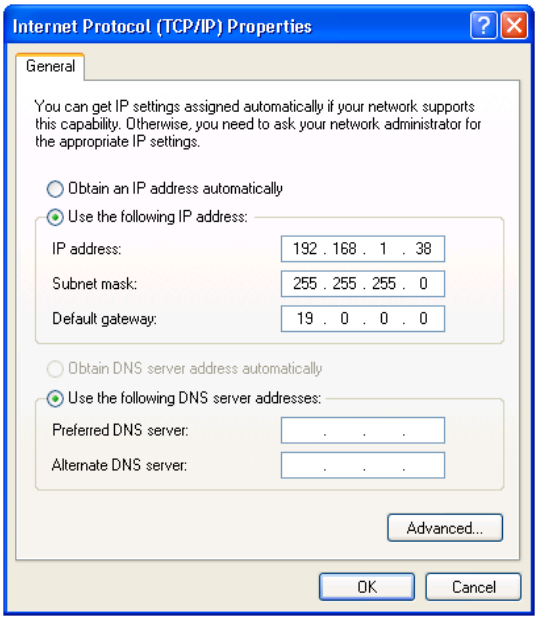
Internet Protocol (TCP/IP) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address:
192 . 168 . 1 . 38
Subnet mask:
255 . 255 . 255 . 0
Default gateway:
19 . 0 . 0 . 0
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server:
Alternate DNS server:
Advanced...
OK
Cancel

Figure 10: Internet Protocol (TCP/IP) Properties Window

7. Click **OK**.

6.5.2 Connecting to the Ethernet Port via a Network Switch/Hub

To connect to the Ethernet port on the VS-1616D via a network switch/hub:

- Connect the PC to the Ethernet network switch/hub using a straight through cable

7 Operating Your Video Matrix Switcher

This section describes:

- The startup display (see Section 7.1)
- Using the selector buttons (see Section 7.2)
- Confirming actions (see Section 7.3)
- Switching options (see Section 7.4)
- Locking the front panel (see Section 7.5)

7.1 Startup Display

After switching on the power, the LCD display[1] shows the following screens in sequence.

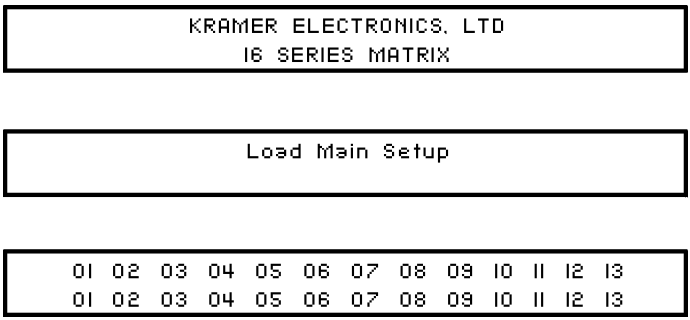

Figure 11: Default Startup Status Display Sequence

The **VS-1616D** does not have separate output and input buttons. Instead, the front panel includes a numeric keypad within the Selector Buttons area[2]. This numeric keypad lets you enter both the output and input numbers as well as various numeric configuration values (see Section 7.2).

When the unit is powered-on, the last matrix setup that was used is loaded. Use either the setup[3] recall (see Section 8.1.6) or default setup recall[4] (see Section 7.4.5) functions to retrieve other setups.

1 The text in the LCD Display may vary (according to machine settings)

2 See Table 1

3 Records a stored configuration from a preset

4 For quick retrieval, you can program a default setup that is commonly used

7.1.1 Viewing the Display

Figure 11 shows the output-input matrix on the LCD display. The LCD display can show only 13 out of the 16 available matrix combinations at once. To view any of the matrix combinations use the ◄ or the ► buttons on the front panel to shift the sliding window to the right or left.

This sliding window functionality is enabled when:

- The switcher is in between operations[1]
- Recalling a setup using the ◄ or ► buttons

When entering an output/input combination, the contents of the LCD display automatically shift to indicate the current status of the selected output.

7.2 Using the Selector Buttons

For numbers between 1 and 9, the **VS-1616D** can handle two digit numbers as well as single digit numbers. When entering a single digit number (for example 5), you can either press 0 followed by 5, or 5 followed by ENT.

Pressing 00 (or 0, ENT) is only relevant for an input and is used to disconnect the currently entered output number from the input.

For example, the following display indicates that outputs 8 and 12 are disconnected from any input (note that the corresponding inputs in the second line are blank):

06	07	08	09	10	11	12	13
12	08		10	14	13		06

The ESC button is used to cancel an operation without affecting the current status. For example, if you enter an incorrect number by mistake, press the ESC button to cancel the operation.

Note: At any stage, if no button is pressed within approximately 15 seconds, the automatic timeout causes the **VS-1616D** to exit the operation and revert to the output/input display.

7.3 Confirming Actions

You can choose to work in the At Once (default[2]) or the Confirm mode.

In the At Once mode:

- The TAKE button does not light

1 Waiting for its next operation while all previous operations are complete or cancelled

2 For all actions except storing/recalling

- Pressing an OUT-IN combination implements the switch without further user confirmation
- You save time as execution is immediate and actions require no user confirmation
- No protection is offered to correct an erroneous action

In the Confirm mode:

- The TAKE button lights
- You enter an action and then confirm it by pressing the TAKE button
- Every action requires user confirmation, protecting against erroneous actions
- Execution is postponed until you confirm the action[1]

7.3.1 Toggling between the At Once and Confirm Modes

To toggle between the At Once and Confirm modes:

Note: If the TAKE button is flashing you cannot toggle between the At Once and Confirm modes. A flashing TAKE button indicates that an action is currently pending confirmation.

1. Press TAKE to toggle between the At Once mode and the Confirm mode.
   The TAKE button lights and actions now require user confirmation.
2. Press the lit TAKE button to toggle from the Confirm mode back to the At Once mode.
   The TAKE button is no longer lit and actions no longer require user confirmation.

7.3.2 Confirming a Switching Action

Actions only require confirmation when the device is in the Confirm mode.

To confirm a switching action:

1. Using the numeric keypad, enter an output-input combination.
   The TAKE button flashes.
2. Press the flashing TAKE button to confirm the action.
   The action is confirmed and the TAKE button lights.

7.4 Switching Actions

This section describes how to:

- Switch one input to one output (see Section 7.4.1)
- Switch several inputs to several outputs (see Section 7.4.2)
- Turn off several outputs (see Section 7.4.3)

1 Failure to press the TAKE button within a few seconds results in the action timing out automatically

7.4.1 Switching one Input to one Output

To switch one input to one output:

1. Using the numeric keypad, enter the required output (in this example, 12). The following is displayed:

   06 07 08 09 10 11 12 13

   In__ => Out 12

   The left-hand side of the display shows a section of the output/input display automatically sliding the content to include output 12.
2. Using the numeric keypad, enter the required input (in this example, 14):
   - In the At Once mode, the switching takes place immediately and the LCD display shows a segment of the input-output status that includes the switched input and output (for example, 14-12)
     In the Confirm mode, the LCD display shows the following:
     In 14 => Out 12
     Incomplete actions time out after approximately 15 seconds.
   - In the Confirm mode, press the flashing TAKE button to switch the input to the output

7.4.2 Switching Several Inputs to Several Outputs

If you want to switch several inputs to several outputs you must be in the Confirm mode.

In the Confirm mode you can enter a batch of several actions and then confirm the batch by pressing TAKE once (simultaneously switching several output-input combinations).

To switch several inputs to several outputs in the Confirm mode:

1. Using the numeric keypad, enter an output-input combination.
   The TAKE button flashes.
2. Enter additional output-input combinations.
   The LCD display can show up to five pending actions (although the batch is not limited to five actions), as follows[1]:

   09 => 06 05 => 07
3. After entering all output/input combinations, press the flashing TAKE button to confirm the actions.
   The inputs switch to the respective outputs as shown on the LCD display and the TAKE LED is lit.

1 In this example, input 9 is set to switch to output 6 and input 5 is set to switch to output 7

7.4.3 Turning an Output Off

Turning an output off means that there is no input switched to this output. This is indicated on the display by the Input being blank underneath the relevant Output.

To turn an output off:

1. Press MENU.
   The Menu buttons light and are enabled.
2. Press OFF (3) on the numeric keypad (see Figure 2).
   The following message is displayed:
   out__ => OFF
3. Use the numeric keypad to turn the required output off.
   The output is turned off.

To turn an output off in the Confirm mode:

- Repeat the steps above and then press the flashing TAKE button to confirm the action

Alternatively, you can perform a switching operation (see Section 7.4.1) and set the input to 00.

7.4.4 Turning Off Several Outputs

To turn off several outputs in the Confirm mode, repeat the switching actions described in Section 7.4.2 but set the inputs to 00.

7.4.5 Recalling the Default Setup

You can store a commonly used setup as the default setup (see Section 8.2.8) which can be recalled at any time.

Note: This is not the setup that is loaded when the unit is turned on. When the unit is turned on, the setup that was last used before the unit was turned off is loaded.

To recall the default setup:

1. Press DEFAULT SETUP.
   The DEFAULT SETUP button flashes and the following message is displayed:
   recall DEFAULT setup
   press FLASHING button to confirm
2. Press DEFAULT SETUP.
   The following message is displayed:
   all Setups and Connections change
   press TAKE to confirm
   - The TAKE button flashes.
3. Press TAKE.
   The default setup is recalled and the display reverts to the output-input display.

7.5 Locking the Front Panel Buttons

You can lock[1] the **VS-1616D** to prevent tampering with the unit or prevent the settings from being changed accidentally via the front panel buttons.

To lock the front panel buttons:

- Press and hold LOCK until the button lights.
  The front panel buttons are locked

To unlock the front panel buttons:

- Press and hold LOCK until the button is no longer lit.
  The front panel buttons are unlocked

8 Using the Configuration Menus

The configuration menus let you configure the **VS-1616D** to best suit your needs. There are two configuration menus:

- Setup Menu—those that are accessed on a regular basis (for example, storing setups and setting the delay), see Section 8.1
- Config Menu—those that are accessed only occasionally (for example, setting the interface or communication protocol), see Section 8.2

Figure 12 shows the navigation through the menu options.

1 You can still remotely operate via RS-232 or Ethernet even when the front panel is locked

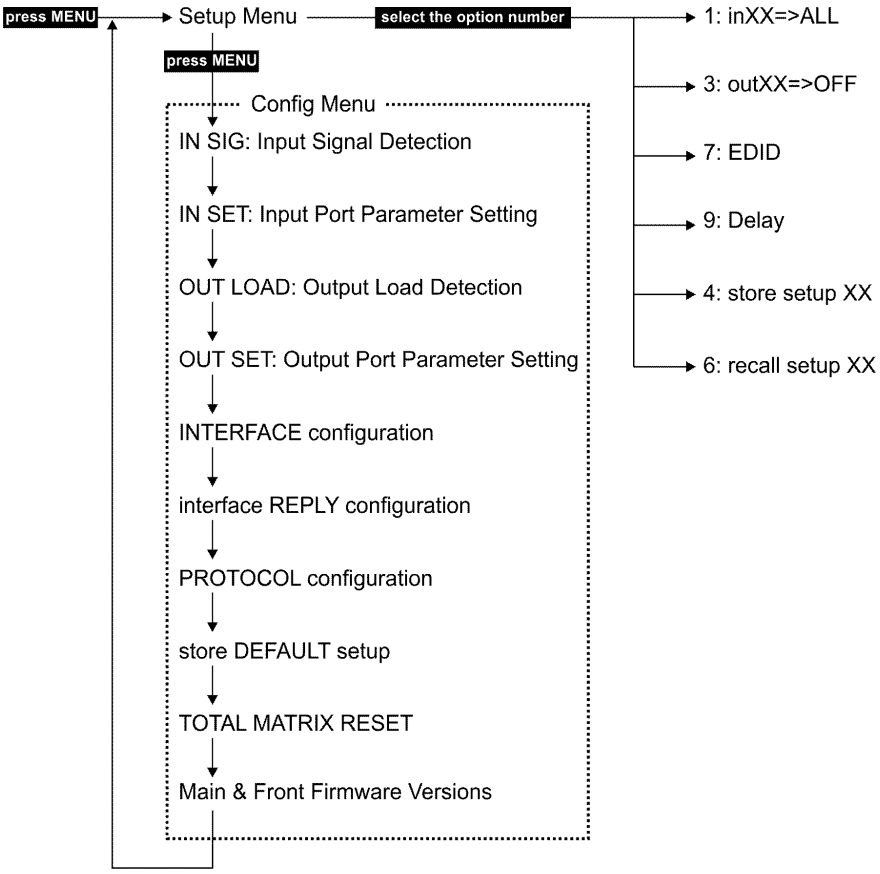

Figure 12: Menu Tree

The following rules apply to the menu operation:

- If no selection is made within approximately 15 seconds, the operation times-out and the display reverts to the output/input display
- At any point in the Menu, press ESC to move up one level or press BREAKAWAY to exit the Menu altogether
- At any point in the Menu, only buttons that are active light or flash
- All of the procedures in this section assume that you are starting the procedure from the standard, operational output/input display

8.1 Using the Setup Menu

The Setup Menu provides access to settings that are regularly changed and comprises the following options:

- **1: inXX=>ALL**, switching one input to all outputs (see Section 8.1.1)
- **3: outXX=OFF**, turning off an output (see Section 8.1.2)
- **7: EDID**, assignment to an output (see Section 8.1.3)
- **9: Delay** setting for an output (see Section 8.1.4)
- **4: store setup XX**, storing the setup in a preset (see Section 8.1.5)
- **6: recall setup XX**, recalling a preset (see Section 8.1.6)

8.1.1 Setup Menu—1: inXX=>ALL, Switching one Input to all Outputs

This option switches one input to all outputs.

To switch one input to all outputs:

1. Press MENU.
   The Setup Menu options are displayed.
2. Press 1 (ALL) on the numeric keypad (see Figure 2).
   The following is displayed:
   in__ => ALL
3. Using the numeric keys, enter the input to be switched to all outputs.
   The TAKE button flashes.
4. Press TAKE.
   The selected input is switched to all outputs.
   The display reverts to the output/input display showing that the selected input is switched to all outputs.

8.1.2 Setup Menu—3: outXX=>OFF, Turning an Output Off

This option turns an output off.

To turn an output off:

1. Press MENU.
   The Setup Menu options are displayed.
2. Press 3 (OFF) on the numeric keypad (see Figure 2).
   The following is displayed:
   out__ => OFF
3. Using the numeric keys, enter the output to be turned off.
   The TAKE button flashes.
4. Press TAKE.
   The selected output is turned off.
   The display reverts to the output/input display showing that the selected output is turned off with the input being blank.

8.1.3 Setup Menu—7: EDID, Assignment to an Input

This option assigns an EDID to between one and eight inputs in non-volatile storage. More than eight EDID assignments must be assigned in multiple batches.

Each input on the **VS-1616D** has a factory default EDID loaded (see Section 15). The EDID for each input can be changed independently via the menu (described below) or by uploading an EDID binary file to each input via the RS-232 port using Kramer K-Sara software[1].

Note: It is necessary to have a display/device connected to the output from which you want to read the EDID. Failure to do so results in the default EDID being written to storage.

To assign an EDID to between one and eight inputs:

1. Press MENU.
   The Setup Menu options are displayed.
2. Press 7 (EDID) on the numeric keypad (see Figure 2).
   The following is displayed:
   SETUP EDID
   ENTER to View EDID and Set EDID
3. Press ENT.
   The current EDID matrix configuration is displayed.
4. Using the numeric keys, enter the input in which to store the EDID (in this example, 08), and enter the output (in this example, 05) from which to read the EDID.
   The following is displayed:

   01 02 03 04 05 06 07 08

   05 out05 => in08

   The TAKE button flashes.
5. Repeat Step 4 for up to eight inputs.
6. Press TAKE.
   The EDID is stored and passed through to the input.
   The display reverts to the output/input display.

To view the EDID assignments:

1. Press MENU.
   The Setup Menu options are displayed.
2. Press 7 (EDID) on the numeric keypad (see Figure 2).
   The following is displayed:
   SETUP EDID
   ENTER to View EDID and Set EDID

1 Available for download from http://www.kramerelectronics.com

3. Press ENT.
   The current EDID matrix configuration is displayed. In this example, input 07 is assigned to output 05, all other EDID values are default.

   05 06 07 08 09 10
   05

8.1.4 Setup Menu—9: Delay, Setting for an Output

This option sets the time delay for an output which lapses between entering a switching action and the execution of the action. This delay can be set for each output independently. The delay is defined in units of 200ms and ranges from 0 to 15, providing delays of between 0 and 3 seconds (15 x 200ms = 3 seconds).

To set the execution delay for an output:

1. Press MENU.
   The Setup Menu options are displayed.
2. Press 9 (DELAY) on the numeric keypad (see Figure 2).
   The output/delay times display is shown.
3. Using the numeric keys, enter the output (in this example, 03).
   The following is displayed:

   01 02 03 04 05 06 07 08
   DLY__ =>out03

4. Using the numeric keys, enter the number of delay units.
5. Press TAKE.
   The selected output delay is set.
   The display reverts to the output/input display.

8.1.5 Setup Menu—4: store setup XX, Storing the Setup in a Preset

This option stores the current setup in a preset (1 to 59).

To store the current setup in a preset:

1. Press MENU.
   The Setup Menu options are displayed.
2. Press 4 (STO) on the numeric keypad (see Figure 2).
   The following is displayed:

   store => __

3. Using the numeric keys, enter the preset (1 to 59) in which to store the current setup.
   The following is displayed:

   Wait …..

   After a few seconds, if the preset is not empty, the following is displayed:

   SETUP NOT EMPTY
   CONFIRM

The TAKE button flashes.

4. Press TAKE.
   The setup is stored in the selected preset for subsequent recall.
   The display reverts to the output/input display.

8.1.6 Setup Menu—6: recall setup XX, Recalling a Preset

This option recalls a stored configuration from a preset (1 to 59).

To recall a stored configuration:

1. Press MENU.
   The Setup Menu options are displayed.
2. Press 6 (RCL) on the numeric keypad (see Figure 2).
   The following is displayed:
   recall <= __
3. Using the numeric keys, enter the preset (in this example, 02) to recall.
   The following is displayed:
   Wait …..
   After a few seconds, the following is displayed on the right hand side:
   CONFIRM
   RECALL <= 02
   The TAKE button flashes.
4. Press TAKE.
   The preset is recalled.
   The display reverts to the output/input display.

8.2 Using the Config Menu

The Config Menu provides access to configuration settings that are not regularly changed and comprises the following options:

- Input signal detection (Section 8.2.1)
- Input port parameter setting (Section 8.2.4)
- Output load detection (see Section 8.2.3)
- Output port parameter setting (Section 8.2.4)
- Interface configuration (see Section 8.2.5)
- Interface reply configuration (Section 8.2.6)
- Protocol switching (Section 8.2.7)
- Storing the default setup (Section 8.2.8)
- Resetting the **VS-1616D** (Section 8.2.9)
- Firmware revision display (Section 8.2.10)

To enter the Config Menu press MENU twice. The MENU button lights and the following message is displayed:

Start configuration menu

MENU to view setups ENT to change them

When browsing through the configuration menu, enabled buttons light or flash.

Use the Config Menu as follows:

1. Press the MENU button to cycle through the menu items[1].
2. Press the ENT button to enter a submenu.
3. After entering a submenu, you can select between several options. Select an option by pressing one of the illuminated buttons in the Selector Buttons area.
4. After selecting the desired option, a description of the desired change is displayed and the TAKE button flashes.
5. Press the flashing TAKE button to confirm the change. A description of the current state is displayed for about one second. The unit automatically switches to the next item in the menu.

8.2.1 Config Menu—Input Signal Detection Display

This option displays a list of inputs and indicates on which of them signals have been detected.

To display a list of inputs that have detected signals:

1. Press MENU twice. The following message is displayed:

   start configuration menu

   MENU to view setup ENT to change them
2. Press MENU. The following is displayed:

IN:	01	02	03	04	05	06	07	08	09	10	11
OUT:	Y	X	Y	Y	Y	Y	X	Y	Y	Y	X

Y indicates that a signal is detected and X indicates that no signal is detected on the relevant input.

3. Do one of the following:
   - Press BREAKAWAY to exit the Config Menu
   - Wait approximately 15 seconds for the operation to time out
   - Press MENU to move to the next Config Menu option

1 The LCD display shows the current status of the selected menu item

8.2.2 Config Menu—Input Port Parameter Setting

This option sets input port specific parameters. Ports that show an X have no parameters available to modify. Ports that show a 0 have parameters available to modify. The parameters that are available, such as, audio balance, depend on the type of card installed and whether the card is an input or an output card. Tables listing input cards and their parameters can be found at the end of this section.

To set parameters for a port:

1. Press MENU twice.
   The following message is displayed:
   start configuration menu
   MENU to view setup ENT to change them
2. Press MENU until a display similar to the following is shown:

IN:	01	02	03	04	05	06	07	08	09	10	11
SET:	X	X	X	X	Y	Y	X	Y	X	X	X

   X indicates that there are no modifiable parameters for the associated port and 0 indicates that there are modifiable parameters for the associated port.
3. Press TAKE to enter the list of ports.
   The cursor flashes on a selected port.
4. Select the required port using the left and right arrow buttons.
5. Press TAKE to enter the parameters list.
   A message similar to the following is displayed with the relevant port number in place of 06:
   IN: 06
   SET: 36.Reset SubBoard
6. To select the next parameter press the right arrow button. (See the table at the end of this section for available parameters.)

Or:

7. To enter the displayed parameter press TAKE.
   The parameter options are displayed.
8. Select the required action or number using the keypad numbers and arrows.
9. Press TAKE to save the change.
10. Repeat from Step 6 to modify other parameters
11. Do one of the following:
    - Press BREAKAWAY to exit the Config Menu
    - Wait approximately 15 seconds for the operation to time out
    - Press MENU to exit to the parameter list

The following tables list the input card types and their relevant parameters.

HDMI plus Analog Audio Input Card		
Parameter	**Description**	**Options**
36.Reset SubBoard	Re-power: power cycles the port Factory: performs a factory reset to default values of the port	Re-power
81.Volume	0 to 100: sets the audio input volume	50
84.Audio Balance	0 to 100: sets the audio input channel balance	50
87.Audio Bass	0 to 100: sets the audio inout bass level	50
88.Audio Treble	0 to 100: sets the audio input treble level	50
91.Audio Mute	MUTE: mutes the audio input Non-MUTE: unmutes the audio input	Non-MUTE
98.Audio Select	Auto: audio signal selection is controlled by the presence or absence of a plug in the 3.5mm mini jack AUD-Embedded: HDMI audio is selected AUD-Ex-Digital: S/PDIF audio is selected (only works on HDMI plus S/PDIF card) AUD-Ex-Analog: Analog audio from the 3.5mm mini jack is selected (only works on HDMI plus analog audio card)	Auto

HDMI plus S/PDIF Audio Input Card		
Parameter	**Description**	**Default**
36.Reset SubBoard	Re-power: power cycles the port Factory: performs a factory reset to default values of the port	Re-power
98.Audio Select	Auto: audio signal selection is controlled by the presence or absence of a plug in the 3.5mm mini jack AUD-Embedded: HDMI audio is selected AUD-Ex-Digital: S/PDIF audio is selected (only works on HDMI plus S/PDIF card) AUD-Ex-Analog: Analog audio from the 3.5mm mini jack is selected (only works on HDMI plus analog audio card)	Auto

HDBaseT Input Card		
Parameter	**Description**	**Options**
36.Reset SubBoard	Re-power: power cycle the port Factory: perform a factory reset to default values of the port	Re-power
98.Audio Select	Auto: audio signal selection is controlled by the presence or absence of a plug in the 3.5mm mini jack AUD-Embedded: HDMI audio is selected AUD-Ex-Digital: S/PDIF audio is selected (only works on HDMI plus S/PDIF card) AUD-Ex-Analog: Analog audio from the 3.5mm mini jack is selected (only works on HDMI plus analog audio card)	Auto

VGA Input Card		
Parameter	**Description**	**Default**
1.DE	(Auto, Manual, Do-Auto)	Auto
2.Phase	(Manual, Do-Auto)	Manual
20.Brightness	(0–63)	32
21.Contrast	(0–63)	32
22.Hue	(0–63)	0
23.Saturation	(0–63)	0
30.Phase adjustment	(0–255)	0
36. Reset SubBoard	Re-power: power cycle the port Factory: perform a factory reset to default values of the port	Re-power
42.Video Format	(VGA, RGBHV, RGsB, RGBS, YUV)	VGA
64.Hor-Total Pixels		1688
67.Horizontal-DE-Start		358
68.Horizontal-DE		1279
69.Vertical-DE-Start		41
70.Vertical-DE		1023
73.SETUP	(0–127)	0
74.RECALL	(0–121)	0

8.2.3 Config Menu—Output Load Detection Display

This option displays a list of outputs and indicates which have loads attached to them.

To display a list of outputs and attached loads:

1. Press MENU twice.
   The following message is displayed:
   start configuration menu
   MENU to view setup ENT to change them
2. Press MENU until the following is displayed:

OUT:	01	02	03	04	05	06	07	08	09	10	11
LOAD:	Y	X	Y	Y	Y	Y	X	Y	Y	Y	X

   Y indicates that a load is attached and X indicates that no load is detected on the relevant output.
3. Do one of the following:
   - Press BREAKAWAY to exit the Config Menu
   - Wait approximately 15 seconds for the operation to time out
   - Press MENU to move to the next Config Menu option

8.2.4 Config Menu—Output Port Parameter Setting

This option sets port specific parameters. Ports that show an X have no parameters available to modify. Ports that show a 0 have parameters available to modify. The parameters that are available, such as, audio balance, depend on the type of card installed and whether the card is an input or an output card. Tables listing output cards and their parameters can be found at the end of this section.

To set parameters for a port:

1. Press MENU twice.
   The following message is displayed:
   start configuration menu
   MENU to view setup ENT to change them
2. Press MENU until a display similar to the following is shown:

OUT:	01	02	03	04	05	06	07	08	09	10	11
SET:	X	X	X	X	O	O	O	O	X	X	X

   X indicates that there are no modifiable parameters for the associated port and 0 indicates that there are modifiable parameters for the associated port.
3. Press TAKE to enter the list of ports.
   The cursor flashes on a selected port.
4. Select the required port to modify using the left and right arrow buttons.
5. Press TAKE to enter the parameters list.
   A message similar to the following is displayed with the relevant port number in place of 06:
   OUT: 06
   SET: 36.Reset SubBoard
6. To select the next parameter press the right arrow button. (See the table at the end of this section for available parameters.)

Or:

7. To enter the displayed parameter press TAKE.
   The parameter options are displayed.
8. Select the required action or number using the keypad numbers and arrows.
9. Press TAKE to save the change.
10. Repeat from Step 6 to modify other parameters
11. Do one of the following:
    - Press BREAKAWAY to exit the Config Menu
    - Wait approximately 15 seconds for the operation to time out
    - Press MENU to exit to the parameter list

The following tables list the output port types and their relevant parameters

HDMI plus Analog Audio Output Card		
Parameter	**Description**	**Options**
36.Reset SubBoard	Re-power: power cycle the port Factory default: perform a factory reset to default values of the port	Re-power
81.Volume	Sets the audio output volume (0–100)	50
84.Audio Balance	Sets the audio output channel balance (0–100)	50
87.Audio Bass	Sets the audio outout bass level (0–100)	50
88.Audio Treble	Sets the audio output treble level (0–100)	50
91.Audio Mute	MUTE: mutes the audio output Non-MUTE: unmutes the audio output	Non-MUTE
94.Audio Mix-Mode	Close: Downscales the audio channels from 7.1 to 2 to the 3.mm mini jack analog audio output Open: Audio channels are not modified	Close
151.BLINK ON AUDIO	1: No video glitch when the audio is connected or disconnected 0: There is a video glitch when the audio is connected or disconnected	1

HDMI plus S/PDIF Audio Output Card		
Parameter	**Description**	**Default**
36.Reset SubBoard	Re-power: power cycle the port Factory default: perform a factory reset to default values of the port	Re-power
81.Volume	Sets the audio output volume (0–100)	50
84.Audio Balance	Sets the audio output channel balance (0–100)	50
87.Audio Bass	Sets the audio outout bass level (0–100)	50
88.Audio Treble	Sets the audio output treble level (0–100)	50
91.Audio Mute	MUTE: mutes the audio output Non-MUTE: unmutes the audio output	Non-MUTE
94.Audio Mix-Mode		50
151.BLINK ON AUDIO	1: No video glitch when the audio is connected or disconnected 0: There is a video glitch when the audio is connected or disconnected	1

HDBaseT Output Card		
Parameter	**Description**	**Options**
36.Reset SubBoard	Re-power: power cycle the port Factory: perform a factory reset to default values of the port	Re-power
151.BLINK ON AUDIO	1: No video glitch when the audio is connected or disconnected 0: There is a video glitch when the audio is connected or disconnected	1

VGA Output Card		
Parameter	**Description**	**Default**
42.Video Format	Sets the video output format (VGA, RGBHV, RGsB, RGBS, YUV)	VGA

8.2.5 Config Menu—Interface Configuration

This option lets you activate or deactivate the IR (infrared) and Ethernet interfaces.

To activate or deactivate the IR or Ethernet interfaces:

1. Press MENU twice.
   The following message is displayed:
   start configuration menu
   MENU to view setup ENT to change them
2. Press MENU until the following is displayed:
   INTERFACE configuration
   current:IR-ON Ethernet-ON
   The current status of the IR and Ethernet interfaces is displayed.
3. Press ENT to select the Interface Submenu.
4. Select 1 to modify the status of the IR interface or 2 to modify that status of the Ethernet interface (in this example, 2).
   The following is displayed:
   Ethernet interface setup
   1:make it ACTIVE 2:turn it OFF
5. Press 1 to activate the interface or 2 to deactivate it.
6. Press TAKE to confirm the action.
   The interface status is changed. After a few seconds the next option on the Config Menu is displayed.

8.2.6 Config Menu—Interface Reply Configuration

This option lets you switch the Reply configuration on or off. Setting Reply to on causes all interfaces that are set to on to accept and execute commands, and also to reply. Setting Reply to off causes all interfaces that are set to on to accept and execute commands, but not to reply.

To switch the Reply configuration on or off:

1. Press MENU twice.
   The following message is displayed:
   start configuration menu
   MENU to view setup ENT to change them
2. Press MENU until the following is displayed:
   interface REPLY configuration
   current interface REPLY – ON
   This indicates the current Reply configuration status.
3. Press ENT to enter the Reply Submenu.
   The following is displayed:
   interface REPLY configuration
   1:turn REPLY ON 2:never REPLY

4. Press 1 to switch Reply on or 2 to switch it off.
5. Press TAKE to confirm the action.
   A message is displayed indicating the new status of the Reply configuration. After a few seconds the next option on the Config Menu is displayed.

8.2.7 Config Menu—Protocol Switching

The **VS-1616D** supports Kramer Protocol 3000 and Protocol 2000.

To switch from Protocol 3000 (default) to Protocol 2000:

1. Press MENU twice.
   The following message is displayed:
   start configuration menu
   MENU to view setup ENT to change them
2. Press MENU until the following is displayed:
   PROTOCOL configuration
   Current: Kramer-3000
   This indicates the current Protocol setting.
3. Press ENT to enter the Reply Submenu.
   The following is displayed:
   PROTOCOL configuration
   1:KRAMER-2000 2:KRAMER-3000
4. Press 1 to switch to Protocol 2000.
   The following is displayed:
   Set PROTOCOL to KRAMER-2000?
   press TAKE to confirm
5. Press TAKE to confirm the action.
   A message is displayed indicating the new Protocol status. After a few seconds the next option on the Config Menu is displayed.

8.2.8 Config Menu—Store Default Setup

This option lets you store the current setup as the default setup. The default setup can be recalled at any time using the DEFAULT SETUP button (see Section 7.4.5).

Note: This is not the setup that is loaded when the unit is switched on.

To store the current setup as the default setup:

1. Press MENU twice.
   The following message is displayed:
   start configuration menu
   MENU to view setup ENT to change them
2. Press MENU until the following is displayed:
   store DEFAULT setup
   press ENTER to store

3. Press ENT to store the current configuration as the default configuration.
   The following is displayed:
   current matrix stage is OKAY?
   press TAKE to confirm
4. Press TAKE.
   The following is displayed:
   current matrix stage
   store as DEFAULT setup
   - This indicates that the current setup is stored as the default setup. After a few seconds the next option on the Config Menu is displayed.

8.2.9 Config Menu—Total Matrix Reset

This option lets you turn all outputs off or reset the unit to its factory default settings.

To reset the matrix setup:

1. Press MENU twice.
   The following message is displayed:
   start configuration menu
   MENU to view setup ENT to change them
2. Press MENU until the following is displayed:
   TOTAL MATRIX RESET
   exit = ESC ENT = submenu
3. Press ENT to enter the Reset Submenu.
   The following is displayed:
   COMPLETELY MATRIX RESET
   1:ALL outputs OFF2:Factory default
4. Press 1 to turn off all outputs or 2 to perform a factory reset of all options.

Caution: Selecting option 2 to perform a factory default reset clears all setups, options and configuration.

5. Press TAKE and wait a few seconds.
   The following is displayed:
   Are you Absolutely sure !!!
   Once more TAKE to confirm
6. Press TAKE.
   The following is displayed:
   Matrix erased!!!
   Please, wait …

The matrix and device configuration are erased. After a few seconds the next option on the Config Menu is displayed.

8.2.10 Config Menu—Display Firmware Versions

This option displays the main and front firmware versions.

To display the firmware versions:

1. Press MENU twice.
   The following message is displayed:
   start configuration menu
   MENU to view setup ENT to change them
2. Press MENU until the following is displayed:
   Main Firmware Version: 1.0
   Front Firmware Version: 1.0
3. Either:
   - Press BREAKAWAY to exit the Config Menu
   - Wait approximately 15 seconds for the operation to time out

9 Configuring the Number of Installed Input and Output Ports

After installing or removing a module you need to set the number of input and output ports so that the **VS-1616D** recognizes the new configuration. Refer to Section 6.1 for an explanation of port numbering before setting the number of input and output ports.

To set the number of input or output ports:

1. Press ESC, ENT and LOCK together.
   The following is displayed:
   Configuration Device
2. Press ENT.
   The following is displayed:
   Test Board: 0 MaxInput:16 MaxOutput:16

Note: The number of input and output ports can only be set in units of two, for example, 4 x 4, 16 x 4 or 12 x 16.

3. Using the numeric keys, enter the number of input and output ports installed.
   The TAKE button flashes.
4. Press TAKE.
   The number of installed ports is saved and the display reverts to the output/input display.
5. Reboot the device by turning the power off and then on again.

10 Installing and Using the Test Module to Troubleshoot Video Problems

The **VS-1616D** includes a test module which can act as a video signal generator and can be used to diagnose video issues in an operating environment.

The test module must be installed in the configuration before it can be used. When installing the test module, the number of configured inputs and outputs must be increased by one. For example:

- If your **VS-1616D** has four inputs and eight outputs, you must configure the **VS-1616D** as 5 x 9
- If your **VS-1616D** has 16 inputs and 16 outputs, you must configure the **VS-1616D** as 17 x 17

10.1 Installing the Test Module

To install the test module in the configuration:

1. Press ESC, ENT and LOCK together.
   The following is displayed:
   Configuration Device
2. Press ENT.
   The following is displayed:
   Test Board: 0 MaxInput:16 MaxOutput:16
   where 0 indicates that the test module is not installed.
3. Using the numeric keys, press 1 to indicate that the test module is installed.
   The TAKE button flashes.
4. Press TAKE.
5. Increase the number of configured inputs and outputs by one (see Section 9).
6. Power cycle the device.
   The test module is now installed and may be used.

10.2 Setting the Resolution of the Generated Video

The test module generates a range of both PC and HD resolutions which are selected by a combination of DIP-switches and an on-board jumper (labeled **B3**). Install the jumper to select HD resolutions or remove the jumper to select PC resolutions.

The Resolution DIP-switch is used to set the resolution of the generated video as listed in Table 7, Table 8 and Figure 13.

Table 7: Available PC Resolutions for Generated Video (Jumper off)

DIP-switch Position		Resolution
1	2	
OFF	OFF	1024 x 768 @60Hz
ON	OFF	1280 x 1024 @60Hz
OFF	ON	1600 x 1200 @60Hz
ON	ON	1920 x 1200 @60Hz

Table 8: Available HD Resolutions for Generated Video (Jumper on, default)

DIP-switch Position		Resolution
1	2	
OFF	OFF	480p (default)
ON	OFF	720p
OFF	ON	1080i
ON	ON	1080p

Figure 13 shows the Resolution DIP-switch with both switches off (up, default, 480p).



Figure 13: Resolution DIP-switch

10.3 Setting the Pattern of the Generated Video

The Pattern button is used to set the pattern of generated video. There are 32 available patterns. Press the button repeatedly to cycle through the patterns.

10.4 Using the Test Module to Troubleshoot Video Problems

The test module may be used in various ways to isolate video problems.

The following examples are based on the signal paths shown in Figure 14 and a **VS-1616D** device installed as follows:

- 16 inputs and 16 outputs
- The test module is installed and configured (see Section 10.1)
- 17 configured inputs and 17 configured outputs (see Section 9)

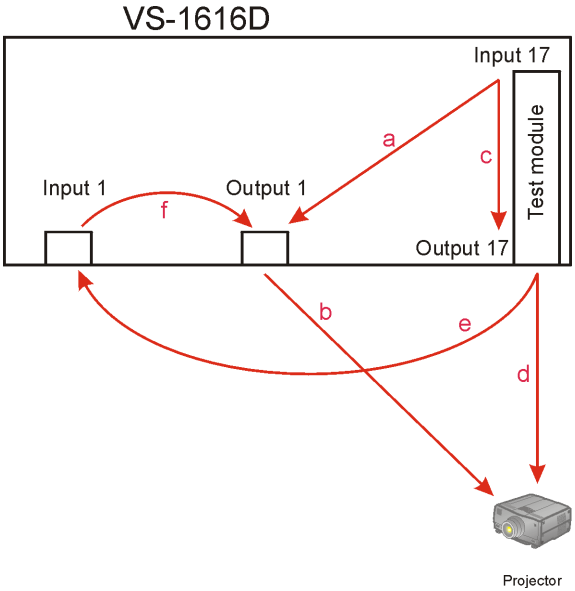

Figure 14: Signal Paths for Isolating problems

10.4.1 Testing the Projector Output

Signal path: c to d; d to projector

To test the projector output:

1. Configure Input 17 to Output 17 (see Section 7.4).
2. Connect Output 17 to the projector.
3. Set the generated video resolution (see Section 10.2).
4. Set the pattern for the generated video (see Section 10.3).
5. Verify that the projector output is as expected.

10.4.2 Testing the Output Signal Path to the Projector

Signal path: a to b; b to projector

To test the output signal path to the projector:

1. Configure Input 17 to Output 1 (see Section 7.4).
2. Connect Output 1 to the projector.
3. Set the generated video resolution (see Section 10.2).
4. Set the pattern for the generated video (see Section 10.3).
5. Verify that the projector output is as expected.

10.4.3 Testing the Input and Output Signal Path to the Projector

Signal path: c to e; e to f; f to b; b to projector

To test the input and output signal path to the projector:

1. Configure Input 17 to Output 17 (see Section 7.4).
2. Connect Output 17 to Input 1.
3. Configure Input 1 to Output 1.
4. Connect Output 1 to the projector.
5. Set the generated video resolution (see Section 10.2).
6. Set the pattern for the generated video (see Section 10.3).
7. Verify that the projector output is as expected.

11 I/O Card Hardware Installation Instructions

The **VS-1616D** I/O cards mount in one of the 16 slots on the rear of the **VS-1616D** chassis. Slots are numbered from left to right and must be filled consecutively from left to right, **without leaving empty slots**.

WARNING: An input card must only be mounted in a slot designated for input cards (slots 1 to 4 and 9 to 12) and an output card must only be mounted in a slot designated for output cards (slots 5 to 8 and 13 to 16).

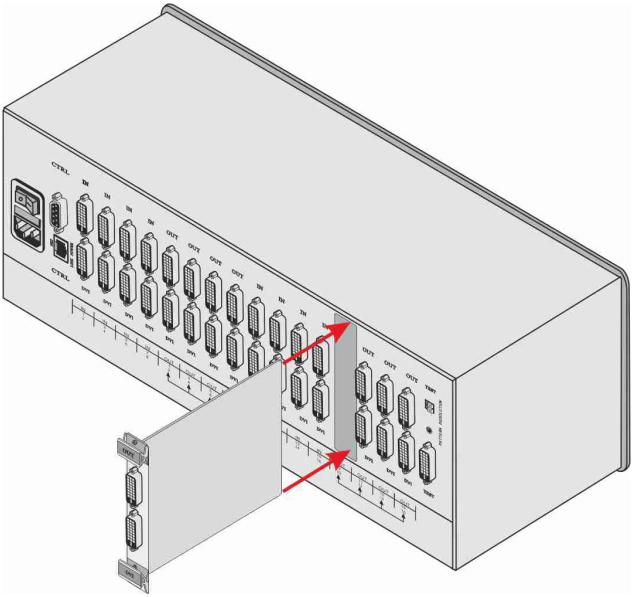

Figure 15: Inserting the Card into a Slot

To install an I/O card as shown in Figure 15:

1. Power off the **VS-1616D** and all devices connected to it.
2. Using a Phillips screwdriver, loosen the screws at the top and bottom of the blanking plate (see Figure 16).

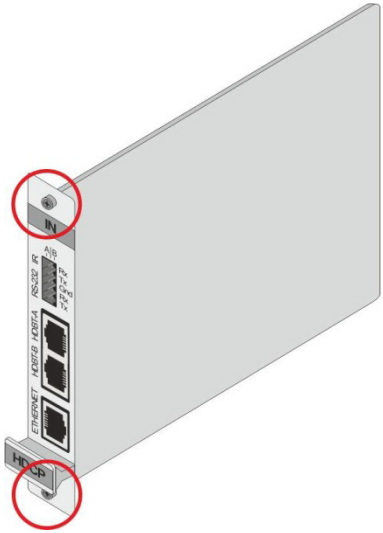

Figure 16: Card Handles

3. Remove the blanking plate from the slot and store it for possible future use.
4. Remove the new card from its shipping box and anti-ESD bag.
5. Holding the card by the lower handle, align the card with the plastic guide rails.
6. Slide the card into the chassis until the front of the card makes contact with the connector inside the chassis.
7. Press the card firmly into the slot until the connector plate is flush with the rear panel of the chassis and the connector is fully seated.
8. Using a Phillips screwdriver, tighten the retaining screws at the top and bottom of the card to secure it to the chassis.
9. Power on the VS-1616D and follow the procedure to configure the new card (see Section 9).
10. Power on the peripheral devices.

12 Upgrading the VS-1616D Firmware

Upgrading the firmware on the **VS-1616D** can be done only by authorized service personnel.

13 Technical Specifications

Table 9 lists the technical specifications of the **VS-1616D**.

Table 9: Technical Specifications of the 16x16 Digital Matrix Switcher

BANDWIDTH:	Supports up to 3.2Gbps bandwidth per channel (limited by the card installed)
MAX RESOLUTION:	Up to UXGA; 1080p, 1920x1200
CONTROLS:	Front panel buttons, Infrared remote control transmitter, RS-232, Ethernet
SWITCHING:	Confirm or At Once for immediate switching
OPERATING TEMPERATURE:	0° to +40°C (32° to 104°F)
STORAGE TEMPERATURE:	–40° to +70°C (–40° to 158°F)
HUMIDITY:	10% to 90%, RHL non-condensing
DIMENSIONS:	19" x 14.2" x 4U (W, D, H) rack-mountable
POWER CONSUMPTION:	100-240V AC, 50/60Hz, 135VA
WEIGHT:	8.1kg (17.9lbs) approx
ACCESSORIES:	Power cord, Infrared remote control transmitter

Table 10 lists the technical specifications of the cards that are compatible with the **VS-1616D** chassis.

Table 10: Technical Specifications of VS-1616D Compatible Cards

MAX RESOLUTION: Up to UXGA; 1080p, 1920x1200							
Card	**Ports**	**Bandwidth per Channel**	**Compliance**	**HDMI Support**	**3D Pass Through**	**Features**	**HDTV Compatible**
DVI	2 DVI-D on DVI-I connector	1.65Gbps	DVI 1.0			Kramer Equalization & re-Klocking™ Technology	Yes
DVI Dual Channel	2 DVI-D on DVI-I connector	3.3Gbps	DVI 1.0				
HDCP	2 HDCP	2.25Gbps	HDCP/HDMI	V.1.4 with Deep Color, x.v.Color™	Yes		
HDMI	2 HDMI	2.25Gbps					
HDMI plus Digital Audio	2 HDMI 2 Digital audio on an RCA connector	2.25Gbps					
HDMI plus Analog Audio	2 HDMI 2 Analog audio on 3.5mm mini jacks	2.25Gbps					
DVI (4LC Fiber Optic[1])	2 4 LC	1.65Gbps	DVI 1.0				
DVI (SC Fiber Optic[2])	2 SC	2.25Gbps	DVI 1.0				
DGKat[3] plus RS-232	2 TP DGKat ports on RJ-45 2 Serial ports on 3-pin terminal blocks	Video: 1.65Gbps Serial Data: 19200	DVI 1.0				
HDBaseT[3]	2 HDBaseT TP on RJ45 connectors 2 RS-232 Serial ports and 2 IR ports on a 10-pin terminal block 1 Ethernet port on an RJ-45 connector	Video: 6.75Gbps (2.25Gpbs per graphic channel) Serial Data: 19200	DVI 1.0				
VGA	2 VGA on 15-pin HD connectors						

1 Multi-mode glass fiber cables with LC connections must be used, such as the Kramer C-4LC/4LC

2 Multi-mode glass fiber cables with SC connections must be used, such as the Kramer C-SC/SC/OM3

3 Twisted pair cables with RJ-45 connections must be used, such as the Kramer BC-DGKat623

14 Default Communication Parameters

Table 11 lists the default communication parameters for the **VS-1616D**.

Table 11: Default Communication Parameters for the VS-1616D

EDID	
EDID data is passed between Output 1 and Input 1	
RS-232	
Protocol 2000/3000	
Baud Rate:	9600
Data Bits:	8
Stop Bits:	1
Parity:	None
Command Format:	HEX
P2000, to switch Output 1 to Input 1:	0x01, 0x81, 0x81, 0x81
P3000, to switch Output 1 to Input 4:	#AV 4>1
Ethernet	
IP Address	192.168.1.39
TCP Port #	5000
UDP Port #	50000

15 Factory Default EDID

15.1 DVI Input Card

Monitor
Model name..... VS-16DVIS
Manufacturer..... KRM
Plug and Play ID..... KRM0200
Serial number..... 1
Manufacture date..... 2006, ISO week 12

EDID revision..... 1.3
Input signal type..... Digital (DVI)
Color bit depth..... Undefined
Display type..... RGB color
Screen size..... 700 x 390 mm (31.5 in)
Power management..... Not supported
Extension blocs..... None

DDC/CI..... n/a

Color characteristics
Default color space..... Non-sRGB
Display gamma..... 2.20
Red chromaticity..... Rx 0.640 - Ry 0.341
Green chromaticity..... Gx 0.286 - Gy 0.610
Blue chromaticity..... Bx 0.146 - By 0.069
White point (default).... Wx 0.284 - Wy 0.293
Additional descriptors... None

Timing characteristics
Horizontal scan range.... 31-94kHz
Vertical scan range..... 50-85Hz
Video bandwidth..... 170MHz
CVT standard..... Not supported
GTF standard..... Not supported
Additional descriptors... None

Preferred timing..... Yes
Native/preferred timing.. 1280x768p at 60Hz (4:3)
Modeline..... "1280x768" 79.500 1280 1344 1472 1664 768 771 778 798 +hsync +vsync
Detailed timing #1..... 1920x1200p at 60Hz (16:10)
Modeline..... "1920x1200" 154.000 1920 1968 2000 2080 1200 1203 1209 1235 +hsync -vsync

Standard timings supported
720 x 400p at 70Hz - IBM VGA
720 x 400p at 88Hz - IBM XGA2
640 x 480p at 60Hz - IBM VGA
640 x 480p at 67Hz - Apple Mac II
640 x 480p at 72Hz - VESA
640 x 480p at 75Hz - VESA
800 x 600p at 56Hz - VESA
800 x 600p at 60Hz - VESA
800 x 600p at 72Hz - VESA
800 x 600p at 75Hz - VESA
832 x 624p at 75Hz - Apple Mac II
1024 x 768i at 87Hz - IBM
1024 x 768p at 60Hz - VESA
1024 x 768p at 70Hz - VESA
1024 x 768p at 75Hz - VESA
1280 x 1024p at 75Hz - VESA
1152 x 870p at 75Hz - Apple Mac II
1360 x 765p at 60Hz - VESA STD
1280 x 800p at 60Hz - VESA STD
1440 x 900p at 60Hz - VESA STD
1280 x 960p at 60Hz - VESA STD
1280 x 1024p at 60Hz - VESA STD
1400 x 1050p at 60Hz - VESA STD
1680 x 1050p at 60Hz - VESA STD
1600 x 1200p at 60Hz - VESA STD

Raw data
00,FF,FF,FF,FF,FF,FF,00,2E,4D,00,02,01,00,00,00,0C,10,01,03,81,46,27,78,0A,D5,7C,A3,57,49,9C,25,11,48,4B,FF,FF,80,
8B,C0,81,00,95,00,81,40,81,80,90,40,B3,00,A9,40,0E,1F,00,80,51,00,1E,30,40,80, 37,00,6F,13,11,00,00,1E,28,3C,80,A0,
70,B0,23,40, 30,20, 36, 00,06,44,21,00,00,1A,00,00,00,FC,00,56, 53,2D,33,32,44,56,49,53,0A,20,20,20,00,00,
00,FD,00,32,55,1F,5E,11,00,0A, 20,20,20, 20, 20,20,00,39

15.2 HDCP Input Card

Monitor
Model name..... VS-16HDCP
Manufacturer..... KRM
Plug and Play ID..... KRM0200
Serial number..... 1
Manufacture date..... 2010, ISO week 24

EDID revision..... 1.3
Input signal type..... Digital (DVI)
Color bit depth..... Undefined
Display type..... RGB color
Screen size..... 700 x 390 mm (31.5 in)
Power management..... Not supported
Extension blocs..... 1 (CEA-EXT)

DDC/CI..... n/a

Color characteristics
Default color space..... Non-sRGB
Display gamma..... 2.20
Red chromaticity..... Rx 0.640 - Ry 0.341
Green chromaticity..... Gx 0.286 - Gy 0.610
Blue chromaticity..... Bx 0.146 - By 0.069
White point (default).... Wx 0.284 - Wy 0.293
Additional descriptors... None

Timing characteristics
Horizontal scan range.... 31-94kHz
Vertical scan range..... 50-85Hz
Video bandwidth..... 170MHz
CVT standard..... Not supported

```
  GTF standard..... Not supported
  Additional descriptors... None
  Preferred timing..... Yes
  Native/preferred timing.. 1920x1080p at 60Hz (16:9)
    Modeline..... "1920x1080" 148.500 1920 2008 2052 2200 1080 1084 1089 1125 +hsync +vsync
  Detailed timing #1..... 1920x1200p at 60Hz (16:10)
    Modeline..... "1920x1200" 154.000 1920 1968 2000 2080 1200 1203 1209 1235 +hsync -vsync

Standard timings supported
    720 x  400p at  70Hz - IBM VGA
    720 x  400p at  88Hz - IBM XGA2
    640 x  480p at  60Hz - IBM VGA
    640 x  480p at  67Hz - Apple Mac II
    640 x  480p at  72Hz - VESA
    640 x  480p at  75Hz - VESA
    800 x  600p at  56Hz - VESA
    800 x  600p at  60Hz - VESA
    800 x  600p at  72Hz - VESA
    800 x  600p at  75Hz - VESA
    832 x  624p at  75Hz - Apple Mac II
    1024 x  768i at  87Hz - IBM
    1024 x  768p at  60Hz - VESA
    1024 x  768p at  70Hz - VESA
    1024 x  768p at  75Hz - VESA
    1280 x 1024p at  75Hz - VESA
    1152 x  870p at  75Hz - Apple Mac II
    1280 x  720p at  60Hz - VESA STD
    1280 x  800p at  60Hz - VESA STD
    1440 x  900p at  60Hz - VESA STD
    1280 x  960p at  60Hz - VESA STD
    1280 x 1024p at  60Hz - VESA STD
    1400 x 1050p at  60Hz - VESA STD
    1680 x 1050p at  60Hz - VESA STD
    1600 x 1200p at  60Hz - VESA STD

EIA/CEA-861 Information
  Revision number..... 3
  IT underscan..... Not supported
  Basic audio..... Supported
  YCbCr 4:4:4..... Not supported
  YCbCr 4:2:2..... Not supported
  Native formats..... 1
  Detailed timing #1..... 720x480p at 60Hz (4:3)
    Modeline..... "720x480" 27.000 720 736 798 858 480 489 495 525 -hsync -vsync
  Detailed timing #2..... 1920x1080i at 60Hz (16:9)
    Modeline..... "1920x1080" 74.250 1920 2008 2052 2200 1080 1084 1094 1124 interlace +hsync +vsync
  Detailed timing #3..... 1920x1080i at 50Hz (16:9)
    Modeline..... "1920x1080" 74.250 1920 2448 2492 2640 1080 1084 1094 1124 interlace +hsync +vsync
  Detailed timing #4..... 1280x720p at 60Hz (16:9)
    Modeline..... "1280x720" 74.250 1280 1390 1430 1650 720 725 730 750 +hsync +vsync
  Detailed timing #5..... 1280x720p at 50Hz (16:9)
    Modeline..... "1280x720" 74.250 1280 1720 1760 1980 720 725 730 750 +hsync +vsync

CE video identifiers (VICs) - timing/formats supported
     720 x  576p at  50Hz - EDTV (4:3, 16:15)
    1280 x  720p at  50Hz - HDTV (16:9, 1:1)
    1920 x 1080i at  60Hz - HDTV (16:9, 1:1)
    1920 x 1080i at  50Hz - HDTV (16:9, 1:1)
    1280 x  720p at  60Hz - HDTV (16:9, 1:1) [Native]
    1920 x 1080p at  60Hz - HDTV (16:9, 1:1)
    1920 x 1080p at  50Hz - HDTV (16:9, 1:1)
    NB: NTSC refresh rate = (Hz*1000)/1001

CE audio data (formats supported)
  LPCM    3-channel, 24-bits            at 44/48 kHz

CE speaker allocation data
  Channel configuration.... 3.0
  Front left/right..... Yes
  Front LFE..... No
  Front center..... Yes
  Rear left/right..... No
  Rear center..... No
```

```
  Front left/right center.. No
  Rear left/right center... No
  Rear LFE................. No

CE vendor specific data (VSDB)
  IEEE registration number. 0x000C03
  CEC physical address..... 1.0.0.0
  Maximum TMDS clock....... 165MHz

Raw data
  00,FF,FF,FF,FF,FF,FF,00,2E,4D,00,02,01,00,00,00,18,14,01,03,81,46,27,78,0A,D5,7C,A3,57,49,9C,25,
  11,48,4B,FF,FF,80,81,C0,81,00,95,00,81,40,81,80,90,40,B3,00,A9,40,02,3A,80,18,71,38,2D,40,58,2C,
  45,00,C4,8E,21,00,00,1E,28,3C,80,A0,70,B0,23,40,30,20,36,00,06,44,21,00,00,1A,00,00,00,FC,00,56,
  53,2D,33,32,48,44,43,50,0A,20,20,20,00,00,00,FD,00,32,55,1F,5E,11,00,0A,20,20,20,20,20,20,01,F9,
  02,03,1A,41,47,11,13,05,14,84,10,1F,23,0A,06,04,83,05,00,00,65,03,0C,00,10,00,8C,0A,D0,8A,20,E0,
  2D,10,10,3E,96,00,58,C2,21,00,00,18,01,1D,80,18,71,1C,16,20,58,2C,25,00,C4,8E,21,00,00,9E,01,1D,
  80,D0,72,1C,16,20,10,2C,25,80,C4,8E,21,00,00,9E,01,1D,00,72,51,D0,1E,20,6E,28,55,00,C4,8E,21,00,
  00,1E,01,1D,00,BC,52,D0,1E,20,B8,28,55,40,C4,8E,21,00,00,1E,00,00,00,00,00,00,00,00,00,00,00,C0
```

15.3 HDMI Input Card

```
Monitor
  Model name.............. VS-16HDCP
  Manufacturer............ KRM
  Plug and Play ID........ KRM0200
  Serial number........... 1
  Manufacture date........ 2006, ISO week 12
  ------------------------
  EDID revision........... 1.3
  Input signal type....... Digital (DVI)
  Color bit depth......... Undefined
  Display type............ RGB color
  Screen size............. 700 x 390 mm (31.5 in)
  Power management........ Not supported
  Extension blocs......... 1 (CEA-EXT)
  ------------------------
  DDC/CI.................. n/a

Color characteristics
  Default color space..... Non-sRGB
  Display gamma........... 2.20
  Red chromaticity........ Rx 0.640 - Ry 0.341
  Green chromaticity...... Gx 0.286 - Gy 0.610
  Blue chromaticity....... Bx 0.146 - By 0.069
  White point (default).... Wx 0.284 - Wy 0.293
  Additional descriptors... None

Timing characteristics
  Horizontal scan range.... 31-94kHz
  Vertical scan range..... 50-85Hz
  Video bandwidth......... 170MHz
  CVT standard............ Not supported
  GTF standard............ Not supported
  Additional descriptors... None
  Preferred timing........ Yes
  Native/preferred timing.. 1280x768p at 60Hz (4:3)
    Modeline.............. "1280x768" 79.500 1280 1344 1472 1664 768 771 778 798 +hsync +vsync
  Detailed timing #1...... 1920x1200p at 60Hz (16:10)
    Modeline.............. "1920x1200" 154.000 1920 1968 2000 2080 1200 1203 1209 1235 +hsync -vsync

Standard timings supported
    720 x  400p at  70Hz - IBM VGA
    720 x  400p at  88Hz - IBM XGA2
    640 x  480p at  60Hz - IBM VGA
    640 x  480p at  67Hz - Apple Mac II
    640 x  480p at  72Hz - VESA
    640 x  480p at  75Hz - VESA
    800 x  600p at  56Hz - VESA
    800 x  600p at  60Hz - VESA
    800 x  600p at  72Hz - VESA
    800 x  600p at  75Hz - VESA
```

```
    832 x  624p at  75Hz - Apple Mac II
   1024 x  768i at  87Hz - IBM
   1024 x  768p at  60Hz - VESA
   1024 x  768p at  70Hz - VESA
   1024 x  768p at  75Hz - VESA
   1280 x 1024p at  75Hz - VESA
   1152 x  870p at  75Hz - Apple Mac II
   1360 x  765p at  60Hz - VESA STD
   1280 x  800p at  60Hz - VESA STD
   1440 x  900p at  60Hz - VESA STD
   1280 x  960p at  60Hz - VESA STD
   1280 x 1024p at  60Hz - VESA STD
   1400 x 1050p at  60Hz - VESA STD
   1680 x 1050p at  60Hz - VESA STD
   1600 x 1200p at  60Hz - VESA STD

EIA/CEA-861 Information
  Revision number..... 3
  IT underscan..... Not supported
  Basic audio..... Supported
  YCbCr 4:4:4..... Not supported
  YCbCr 4:2:2..... Not supported
  Native formats..... 1
  Detailed timing #1..... 720x480p at 60Hz (4:3)
    Modeline..... "720x480" 27.000 720 736 798 858 480 489 495 525 -hsync -vsync
  Detailed timing #2..... 1920x1080i at 60Hz (16:9)
    Modeline..... "1920x1080" 74.250 1920 2008 2052 2200 1080 1084 1094 1124 interlace +hsync +vsync
  Detailed timing #3..... 1920x1080i at 50Hz (16:9)
    Modeline..... "1920x1080" 74.250 1920 2448 2492 2640 1080 1084 1094 1124 interlace +hsync +vsync
  Detailed timing #4..... 1280x720p at 60Hz (16:9)
    Modeline..... "1280x720" 74.250 1280 1390 1430 1650 720 725 730 750 +hsync +vsync
  Detailed timing #5..... 1280x720p at 50Hz (16:9)
    Modeline..... "1280x720" 74.250 1280 1720 1760 1980 720 725 730 750 +hsync +vsync

CE video identifiers (VICs) - timing/formats supported
    720 x  576p at  50Hz - EDTV (4:3, 16:15)
   1280 x  720p at  50Hz - HDTV (16:9, 1:1)
   1920 x 1080i at  60Hz - HDTV (16:9, 1:1)
   1920 x 1080i at  50Hz - HDTV (16:9, 1:1)
   1280 x  720p at  60Hz - HDTV (16:9, 1:1) [Native]
   1920 x 1080p at  60Hz - HDTV (16:9, 1:1)
   1920 x 1080p at  50Hz - HDTV (16:9, 1:1)
   NB: NTSC refresh rate = (Hz*1000)/1001

CE audio data (formats supported)
  LPCM    3-channel, 24-bits            at 44/48 kHz

CE speaker allocation data
  Channel configuration.... 3.0
  Front left/right..... Yes
  Front LFE..... No
  Front center..... Yes
  Rear left/right..... No
  Rear center..... No
  Front left/right center.. No
  Rear left/right center... No
  Rear LFE..... No
CE vendor specific data (VSDB)
  IEEE registration number. 0x000C03
  CEC physical address..... 1.0.0.0
  Maximum TMDS clock..... 165MHz

Raw data
  00,FF,FF,FF,FF,FF,FF,00,2E,4D,00,02,01,00,00,00,0C,10,01,03,81,46,27,78,0A,D5,7C,A3,57,49,9C,25,
  11,48,4B,FF,FF,80,8B,C0,81,00,95,00,81,40,81,80,90,40,B3,00,A9,40,0E,1F,00,80,51,00,1E,30,40,80,
  37,00,6F,13,11,00,00,1E,28,3C,80,A0,70,B0,23,40,30,20,36,00,06,44,21,00,00,1A,00,00,00,FC,00,56,
  53,2D,31,36,48,44,43,50,0A,20,20,20,00,00,00,FD,00,32,55,1F,5E,11,00,0A,20,20,20,20,20,20,01,4D,
  02,03,1A,41,47,11,13,05,14,84,10,1F,23,0A,06,04,83,05,00,00,65,03,0C,00,10,00,8C,0A,D0,8A,20,E0,
  2D,10,10,3E,96,00,58,C2,21,00,00,18,01,1D,80,18,71,1C,16,20,58,2C,25,00,C4,8E,21,00,00,9E,01,1D,
  80,D0,72,1C,16,20,10,2C,25,80,C4,8E,21,00,00,9E,01,1D,00,72,51,D0,1E,20,6E,28,55,00,C4,8E,21,00,
  00,1E,01,1D,00,BC,52,D0,1E,20,B8,28,55,40,C4,8E,21,00,00,1E,00,00,00,00,00,00,00,00,00,00,00,C0
  Model name..... VS-16HDCP
  Manufacturer..... KRM
```

Plug and Play ID..... KRM0200
Serial number..... 1
Manufacture date..... 2010, ISO week 24

15.4 HDMI plus Audio Input Card

Monitor
Model name..... VS-16H
Manufacturer..... KRM
Plug and Play ID..... KRM0200
Serial number..... 1
Manufacture date..... 2006, ISO week 12
Filter driver..... None

EDID revision..... 1.3
Input signal type..... Digital (DVI)
Color bit depth..... Undefined
Display type..... RGB color
Screen size..... 700 x 390 mm (31.5 in)
Power management..... Not supported
Extension blocs..... 1 (CEA-EXT)

DDC/CI..... n/a

Color characteristics
Default color space..... Non-sRGB
Display gamma..... 2.20
Red chromaticity..... Rx 0.640 - Ry 0.341
Green chromaticity..... Gx 0.286 - Gy 0.610
Blue chromaticity..... Bx 0.146 - By 0.069
White point (default).... Wx 0.284 - Wy 0.293
Additional descriptors... None

Timing characteristics
Horizontal scan range.... 31-94kHz
Vertical scan range..... 50-85Hz
Video bandwidth..... 170MHz
CVT standard..... Not supported
GTF standard..... Not supported
Additional descriptors... None
Preferred timing..... Yes
Native/preferred timing.. 1280x768p at 60Hz (4:3)
Modeline..... "1280x768" 79.500 1280 1344 1472 1664 768 771 778 798 +hsync +vsync
Detailed timing #1..... 1920x1200p at 60Hz (16:10)
Modeline..... "1920x1200" 154.000 1920 1968 2000 2080 1200 1203 1209 1235 +hsync -vsync

Standard timings supported
720 x 400p at 70Hz - IBM VGA
720 x 400p at 88Hz - IBM XGA2
640 x 480p at 60Hz - IBM VGA
640 x 480p at 67Hz - Apple Mac II
640 x 480p at 72Hz - VESA
640 x 480p at 75Hz - VESA
800 x 600p at 56Hz - VESA
800 x 600p at 60Hz - VESA
800 x 600p at 72Hz - VESA
800 x 600p at 75Hz - VESA
832 x 624p at 75Hz - Apple Mac II
1024 x 768i at 87Hz - IBM
1024 x 768p at 60Hz - VESA
1024 x 768p at 70Hz - VESA
1024 x 768p at 75Hz - VESA
1280 x 1024p at 75Hz - VESA
1152 x 870p at 75Hz - Apple Mac II
1360 x 765p at 60Hz - VESA STD
1280 x 800p at 60Hz - VESA STD
1440 x 900p at 60Hz - VESA STD
1280 x 960p at 60Hz - VESA STD
1280 x 1024p at 60Hz - VESA STD
1400 x 1050p at 60Hz - VESA STD
1680 x 1050p at 60Hz - VESA STD
1600 x 1200p at 60Hz - VESA STD

EIA/CEA-861 Information
Revision number..... 3
IT underscan..... Not supported
Basic audio..... Supported
YCbCr 4:4:4..... Not supported
YCbCr 4:2:2..... Not supported
Native formats..... 1
Detailed timing #1..... 720x480p at 60Hz (4:3)
Modeline..... "720x480" 27.000 720 736 798 858 480 489 495 525 -hsync -vsync
Detailed timing #2..... 1920x1080i at 60Hz (16:9)
Modeline..... "1920x1080" 74.250 1920 2008 2052 2200 1080 1084 1094 1124 interlace +hsync +vsync
Detailed timing #3..... 1920x1080i at 50Hz (16:9)
Modeline..... "1920x1080" 74.250 1920 2448 2492 2640 1080 1084 1094 1124 interlace +hsync +vsync
Detailed timing #4..... 1280x720p at 60Hz (16:9)
Modeline..... "1280x720" 74.250 1280 1390 1430 1650 720 725 730 750 +hsync +vsync
Detailed timing #5..... 1280x720p at 50Hz (16:9)
Modeline..... "1280x720" 74.250 1280 1720 1760 1980 720 725 730 750 +hsync +vsync

CE video identifiers (VICs) - timing/formats supported
720 x 576p at 50Hz - EDTV (4:3, 16:15)
1280 x 720p at 50Hz - HDTV (16:9, 1:1)
1920 x 1080i at 60Hz - HDTV (16:9, 1:1)
1920 x 1080i at 50Hz - HDTV (16:9, 1:1)
1280 x 720p at 60Hz - HDTV (16:9, 1:1) [Native]
1920 x 1080p at 60Hz - HDTV (16:9, 1:1)
1920 x 1080p at 50Hz - HDTV (16:9, 1:1)
NB: NTSC refresh rate = (Hz*1000)/1001

CE audio data (formats supported)
LPCM 3-channel, 24-bits at 44/48 kHz

CE speaker allocation data
Channel configuration.... 3.0
Front left/right..... Yes
Front LFE..... No
Front center..... Yes
Rear left/right..... No
Rear center..... No
Front left/right center.. No
Rear left/right center... No
Rear LFE..... No

CE vendor specific data (VSDB)
IEEE registration number. 0x000C03
CEC physical address..... 1.0.0.0
Maximum TMDS clock..... 165MHz

Raw data
00,FF,FF,FF,FF,FF,FF,00,2E,4D,00,02,01,00,00,00,0C,10,01,03,81,46,27,78,0A,D5,7C,A3,57,49,9C,25,
11,48,4B,FF,FF,80,8B,C0,81,00,95,00,81,40,81,80,90,40,B3,00,A9,40,0E,1F,00,80,51,00,1E,30,40,80,
37,00,6F,13,11,00,00,1E,28,3C,80,A0,70,B0,23,40,30,20,36,00,06,44,21,00,00,1A,00,00,00,FC,00,56,
53,2D,31,36,48,0A,20,20,20,20,20,20,00,00,00,FD,00,32,55,1F,5E,11,00,0A,20,20,20,20,20,20,01,C4,
02,03,1A,41,47,11,13,05,14,84,10,1F,23,0A,06,04,83,05,00,00,65,03,0C,00,10,00,8C,0A,D0,8A,20,E0,
2D,10,10,3E,96,00,58,C2,21,00,00,18,01,1D,80,18,71,1C,16,20,58,2C,25,00,C4,8E,21,00,00,9E,01,1D,
80,D0,72,1C,16,20,10,2C,25,80,C4,8E,21,00,00,9E,01,1D,00,72,51,D0,1E,20,6E,28,55,00,C4,8E,21,00,
00,1E,01,1D,00,BC,52,D0,1E,20,B8,28,55,40,C4,8E,21,00,00,1E,00,00,00,00,00,00,00,00,00,00,00,C0

15.5 DVI Dual Channel Input Card

Monitor
Model name..... VS-16DUAL
Manufacturer..... KRM
Plug and Play ID..... KRM0200
Serial number..... 1
Manufacture date..... 2006, ISO week 12
Filter driver..... None

EDID revision..... 1.3
Input signal type..... Digital (DVI)
Color bit depth..... Undefined
Display type..... RGB color

```
  Screen size..... 700 x 390 mm (31.5 in)
  Power management..... Not supported
  Extension blocs..... None
  ----------------------
  DDC/CI..... n/a

Color characteristics
  Default color space..... Non-sRGB
  Display gamma..... 2.20
  Red chromaticity..... Rx 0.640 - Ry 0.341
  Green chromaticity..... Gx 0.286 - Gy 0.610
  Blue chromaticity..... Bx 0.146 - By 0.069
  White point (default).... Wx 0.284 - Wy 0.293
  Additional descriptors... None

Timing characteristics
  Horizontal scan range.... 31-94kHz
  Vertical scan range..... 50-85Hz
  Video bandwidth..... 170MHz
  CVT standard..... Not supported
  GTF standard..... Not supported
  Additional descriptors... None
  Preferred timing..... Yes
  Native/preferred timing.. 1024x768p at 60Hz (4:3)
    Modeline..... "1024x768" 65.000 1024 1048 1184 1344 768 771 777 806 +hsync +vsync
  Detailed timing #1..... 1920x1200p at 60Hz (16:10)
    Modeline..... "1920x1200" 154.000 1920 1968 2000 2080 1200 1203 1209 1235 +hsync -vsync

Standard timings supported
     720 x  400p at  70Hz - IBM VGA
     720 x  400p at  88Hz - IBM XGA2
     640 x  480p at  60Hz - IBM VGA
     640 x  480p at  67Hz - Apple Mac II
     640 x  480p at  72Hz - VESA
     640 x  480p at  75Hz - VESA
     800 x  600p at  56Hz - VESA
     800 x  600p at  60Hz - VESA
     800 x  600p at  72Hz - VESA
     800 x  600p at  75Hz - VESA
     832 x  624p at  75Hz - Apple Mac II
    1024 x  768i at  87Hz - IBM
    1024 x  768p at  60Hz - VESA
    1024 x  768p at  70Hz - VESA
    1024 x  768p at  75Hz - VESA
    1280 x 1024p at  75Hz - VESA
    1152 x  870p at  75Hz - Apple Mac II
    1360 x  765p at  60Hz - VESA STD
    1280 x  800p at  60Hz - VESA STD
    1440 x  900p at  60Hz - VESA STD
    1280 x  960p at  60Hz - VESA STD
    1280 x 1024p at  60Hz - VESA STD
    1400 x 1050p at  60Hz - VESA STD
    1680 x 1050p at  60Hz - VESA STD
    1600 x 1200p at  60Hz - VESA STD

EIA/CEA-861 Information
  Revision number..... 3
  IT underscan..... Not supported
  Basic audio..... Supported
  YCbCr 4:4:4..... Not supported
  YCbCr 4:2:2..... Not supported
  Native formats..... 1
  Detailed timing #1..... 720x480p at 60Hz (4:3)
    Modeline..... "720x480" 27.000 720 736 798 858 480 489 495 525 -hsync -vsync
  Detailed timing #2..... 1920x1080i at 60Hz (16:9)
    Modeline..... "1920x1080" 74.250 1920 2008 2052 2200 1080 1084 1094 1124 interlace +hsync +vsync
  Detailed timing #3..... 1920x1080i at 50Hz (16:9)
    Modeline..... "1920x1080" 74.250 1920 2448 2492 2640 1080 1084 1094 1124 interlace +hsync +vsync
  Detailed timing #4..... 1280x720p at 60Hz (16:9)
    Modeline..... "1280x720" 74.250 1280 1390 1430 1650 720 725 730 750 +hsync +vsync
  Detailed timing #5..... 1280x720p at 50Hz (16:9)
    Modeline..... "1280x720" 74.250 1280 1720 1760 1980 720 725 730 750 +hsync +vsync
```

CE video identifiers (VICs) - timing/formats supported
720 x 576p at 50Hz - EDTV (4:3, 16:15)
1280 x 720p at 50Hz - HDTV (16:9, 1:1)
1920 x 1080i at 60Hz - HDTV (16:9, 1:1)
1920 x 1080i at 50Hz - HDTV (16:9, 1:1)
1280 x 720p at 60Hz - HDTV (16:9, 1:1) [Native]
1920 x 1080p at 60Hz - HDTV (16:9, 1:1)
1920 x 1080p at 50Hz - HDTV (16:9, 1:1)
NB: NTSC refresh rate = (Hz*1000)/1001

CE audio data (formats supported)
LPCM 3-channel, 24-bits at 44/48 kHz

CE speaker allocation data
Channel configuration.... 3.0
Front left/right..... Yes
Front LFE..... No
Front center..... Yes
Rear left/right..... No
Rear center..... No
Front left/right center.. No
Rear left/right center... No
Rear LFE..... No

CE vendor specific data (VSDB)
IEEE registration number. 0x000C03
CEC physical address..... 1.0.0.0
Maximum TMDS clock..... 165MHz

Raw data
00,FF,FF,FF,FF,FF,FF,00,2E,4D,00,02,01,00,00,00,0C,10,01,03,81,46,27,78,0A,D5,7C,A3,57,49,9C,25,
11,48,4B,FF,FF,80,8B,C0,81,00,95,00,81,40,81,80,90,40,B3,00,A9,40,64,19,00,40,41,00,26,30,18,88,
36,00,6F,13,11,00,00,1E,28,3C,80,A0,70,B0,23,40,30,20,36,00,06,44,21,00,00,1A,00,00,00,FC,00,56,
53,2D,31,36,44,55,41,4C,0A,20,20,20,00,00,00,FD,00,32,55,1F,5E,11,00,0A,20,20,20,20,20,20,00,60,
02,03,1A,41,47,11,13,05,14,84,10,1F,23,0A,06,04,83,05,00,00,65,03,0C,00,10,00,8C,0A,D0,8A,20,E0,
2D,10,10,3E,96,00,58,C2,21,00,00,18,01,1D,80,18,71,1C,16,20,58,2C,25,00,C4,8E,21,00,00,9E,01,1D,
80,D0,72,1C,16,20,10,2C,25,80,C4,8E,21,00,00,9E,01,1D,00,72,51,D0,1E,20,6E,28,55,00,C4,8E,21,00,
00,1E,01,1D,00,BC,52,D0,1E,20,B8,28,55,40,C4,8E,21,00,00,1E,00,00,00,00,00,00,00,00,00,00,00,C0

15.6 DGKat Input Card

Monitor
Model name..... VS-16hCat5e
Manufacturer..... KRM
Plug and Play ID..... KRM0200
Serial number..... 1
Manufacture date..... 2006, ISO week 12
Filter driver..... None

EDID revision..... 1.3
Input signal type..... Digital (DVI)
Color bit depth..... Undefined
Display type..... RGB color
Screen size..... 700 x 390 mm (31.5 in)
Power management..... Not supported
Extension blocs..... 1 (CEA-EXT)

DDC/CI..... n/a

Color characteristics
Default color space..... Non-sRGB
Display gamma..... 2.20
Red chromaticity..... Rx 0.640 - Ry 0.341
Green chromaticity..... Gx 0.286 - Gy 0.610
Blue chromaticity..... Bx 0.146 - By 0.069
White point (default).... Wx 0.284 - Wy 0.293
Additional descriptors... None

Timing characteristics
Horizontal scan range.... 31-94kHz
Vertical scan range..... 50-85Hz
Video bandwidth..... 170MHz

```
  CVT standard..... Not supported
  GTF standard..... Not supported
  Additional descriptors... None
  Preferred timing..... Yes
  Native/preferred timing.. 1280x768p at 60Hz (4:3)
    Modeline..... "1280x768" 79.500 1280 1344 1472 1664 768 771 778 798 +hsync +vsync
  Detailed timing #1..... 1920x1200p at 60Hz (16:10)
    Modeline..... "1920x1200" 154.000 1920 1968 2000 2080 1200 1203 1209 1235 +hsync -vsync

Standard timings supported
     720 x  400p at  70Hz - IBM VGA
     720 x  400p at  88Hz - IBM XGA2
     640 x  480p at  60Hz - IBM VGA
     640 x  480p at  67Hz - Apple Mac II
     640 x  480p at  72Hz - VESA
     640 x  480p at  75Hz - VESA
     800 x  600p at  56Hz - VESA
     800 x  600p at  60Hz - VESA
     800 x  600p at  72Hz - VESA
     800 x  600p at  75Hz - VESA
     832 x  624p at  75Hz - Apple Mac II
    1024 x  768i at  87Hz - IBM
    1024 x  768p at  60Hz - VESA
    1024 x  768p at  70Hz - VESA
    1024 x  768p at  75Hz - VESA
    1280 x 1024p at  75Hz - VESA
    1152 x  870p at  75Hz - Apple Mac II
    1360 x  765p at  60Hz - VESA STD
    1280 x  800p at  60Hz - VESA STD
    1440 x  900p at  60Hz - VESA STD
    1280 x  960p at  60Hz - VESA STD
    1280 x 1024p at  60Hz - VESA STD
    1400 x 1050p at  60Hz - VESA STD
    1680 x 1050p at  60Hz - VESA STD
    1600 x 1200p at  60Hz - VESA STD

EIA/CEA-861 Information
  Revision number..... 3
  IT underscan..... Not supported
  Basic audio..... Supported
  YCbCr 4:4:4..... Not supported
  YCbCr 4:2:2..... Not supported
  Native formats..... 1
  Detailed timing #1..... 720x480p at 60Hz (4:3)
    Modeline..... "720x480" 27.000 720 736 798 858 480 489 495 525 -hsync -vsync
  Detailed timing #2..... 1920x1080i at 60Hz (16:9)
    Modeline..... "1920x1080" 74.250 1920 2008 2052 2200 1080 1084 1094 1124 interlace +hsync +vsync
  Detailed timing #3..... 1920x1080i at 50Hz (16:9)
    Modeline..... "1920x1080" 74.250 1920 2448 2492 2640 1080 1084 1094 1124 interlace +hsync +vsync
  Detailed timing #4..... 1280x720p at 60Hz (16:9)
    Modeline..... "1280x720" 74.250 1280 1390 1430 1650 720 725 730 750 +hsync +vsync
  Detailed timing #5..... 1280x720p at 50Hz (16:9)
    Modeline..... "1280x720" 74.250 1280 1720 1760 1980 720 725 730 750 +hsync +vsync

CE video identifiers (VICs) - timing/formats supported
     720 x  576p at  50Hz - EDTV (4:3, 16:15)
    1280 x  720p at  50Hz - HDTV (16:9, 1:1)
    1920 x 1080i at  60Hz - HDTV (16:9, 1:1)
    1920 x 1080i at  50Hz - HDTV (16:9, 1:1)
    1280 x  720p at  60Hz - HDTV (16:9, 1:1) [Native]
    1920 x 1080p at  60Hz - HDTV (16:9, 1:1)
    1920 x 1080p at  50Hz - HDTV (16:9, 1:1)
    NB: NTSC refresh rate = (Hz*1000)/1001

CE audio data (formats supported)
  LPCM    3-channel, 24-bits            at 44/48 kHz

CE speaker allocation data
  Channel configuration.... 3.0
  Front left/right..... Yes
  Front LFE..... No
  Front center..... Yes
  Rear left/right..... No
```

Rear center..... No
Front left/right center.. No
Rear left/right center... No
Rear LFE..... No

CE vendor specific data (VSDB)
IEEE registration number. 0x000C03
CEC physical address..... 1.0.0.0
Maximum TMDS clock..... 165MHz

Raw data
00,FF,FF,FF,FF,FF,FF,00,2E,4D,00,02,01,00,00,00,0C,10,01,03,81,46,27,78,0A,D5,7C,A3,57,49,9C,25,
11,48,4B,FF,FF,80,8B,C0,81,00,95,00,81,40,81,80,90,40,B3,00,A9,40,0E,1F,00,80,51,00,1E,30,40,80,
37,00,6F,13,11,00,00,1E,28,3C,80,A0,70,B0,23,40,30,20,36,00,06,44,21,00,00,1A,00,00,00,FC,00,56,
53,2D,31,36,68,43,61,74,35,65,0A,20,00,00,00,FD,00,32,55,1F,5E,11,00,0A,20,20,20,20,20,20,01,92,
02,03,1A,41,47,11,13,05,14,84,10,1F,23,0A,06,04,83,05,00,00,65,03,0C,00,10,00,8C,0A,D0,8A,20,E0,
2D,10,10,3E,96,00,58,C2,21,00,00,18,01,1D,80,18,71,1C,16,20,58,2C,25,00,C4,8E,21,00,00,9E,01,1D,
80,D0,72,1C,16,20,10,2C,25,80,C4,8E,21,00,00,9E,01,1D,00,72,51,D0,1E,20,6E,28,55,00,C4,8E,21,00,
00,1E,01,1D,00,BC,52,D0,1E,20,B8,28,55,40,C4,8E,21,00,00,1E,00,00,00,00,00,00,00,00,00,00,C0

15.7 HDBaseT Input Card

Monitor
Model name..... VS-16HDBST
Manufacturer..... KRM
Plug and Play ID..... KRM0200
Serial number..... 1
Manufacture date..... 2006, ISO week 12
Filter driver..... None

EDID revision..... 1.3
Input signal type..... Digital (DVI)
Color bit depth..... Undefined
Display type..... RGB color
Screen size..... 700 x 390 mm (31.5 in)
Power management..... Not supported
Extension blocs..... 1 (CEA-EXT)

DDC/CI..... n/a

Color characteristics
Default color space..... Non-sRGB
Display gamma..... 2.20
Red chromaticity..... Rx 0.640 - Ry 0.341
Green chromaticity..... Gx 0.286 - Gy 0.610
Blue chromaticity..... Bx 0.146 - By 0.069
White point (default).... Wx 0.284 - Wy 0.293
Additional descriptors... None

Timing characteristics
Horizontal scan range.... 31-94kHz
Vertical scan range..... 50-85Hz
Video bandwidth..... 170MHz
CVT standard..... Not supported
GTF standard..... Not supported
Additional descriptors... None
Preferred timing..... Yes
Native/preferred timing.. 1280x720p at 60Hz
Modeline..... "1280x720" 74.250 1280 1390 1430 1650 720 725 730 746 +hsync -vsync
Detailed timing #1..... 1920x1200p at 60Hz (16:10)
Modeline..... "1920x1200" 154.000 1920 1968 2000 2080 1200 1203 1209 1235 +hsync -vsync

Standard timings supported
720 x 400p at 70Hz - IBM VGA
720 x 400p at 88Hz - IBM XGA2
640 x 480p at 60Hz - IBM VGA
640 x 480p at 67Hz - Apple Mac II
640 x 480p at 72Hz - VESA
640 x 480p at 75Hz - VESA
800 x 600p at 56Hz - VESA
800 x 600p at 60Hz - VESA
800 x 600p at 72Hz - VESA

```
    800 x  600p at  75Hz - VESA
    832 x  624p at  75Hz - Apple Mac II
   1024 x  768i at  87Hz - IBM
   1024 x  768p at  60Hz - VESA
   1024 x  768p at  70Hz - VESA
   1024 x  768p at  75Hz - VESA
   1280 x 1024p at  75Hz - VESA
   1152 x  870p at  75Hz - Apple Mac II
   1360 x  765p at  60Hz - VESA STD
   1280 x  800p at  60Hz - VESA STD
   1440 x  900p at  60Hz - VESA STD
   1280 x  960p at  60Hz - VESA STD
   1280 x 1024p at  60Hz - VESA STD
   1400 x 1050p at  60Hz - VESA STD
   1680 x 1050p at  60Hz - VESA STD
   1600 x 1200p at  60Hz - VESA STD

EIA/CEA-861 Information
  Revision number..... 3
  IT underscan..... Not supported
  Basic audio..... Supported
  YCbCr 4:4:4..... Supported
  YCbCr 4:2:2..... Supported
  Native formats..... 1
  Detailed timing #1..... 720x480p at 60Hz (4:3)
    Modeline..... "720x480" 27.000 720 736 798 858 480 489 495 525 -hsync -vsync
  Detailed timing #2..... 1920x1080i at 60Hz (16:9)
    Modeline..... "1920x1080" 74.250 1920 2008 2052 2200 1080 1084 1094 1124 interlace +hsync +vsync
  Detailed timing #3..... 1920x1080i at 50Hz (16:9)
    Modeline..... "1920x1080" 74.250 1920 2448 2492 2640 1080 1084 1094 1124 interlace +hsync +vsync
  Detailed timing #4..... 1280x720p at 60Hz (16:9)
    Modeline..... "1280x720" 74.250 1280 1390 1430 1650 720 725 730 750 +hsync +vsync
  Detailed timing #5..... 1280x720p at 50Hz (16:9)
    Modeline..... "1280x720" 74.250 1280 1720 1760 1980 720 725 730 750 +hsync +vsync

CE video identifiers (VICs) - timing/formats supported
    720 x  576p at  50Hz - EDTV (4:3, 16:15)
   1280 x  720p at  50Hz - HDTV (16:9, 1:1)
   1920 x 1080i at  60Hz - HDTV (16:9, 1:1)
   1920 x 1080i at  50Hz - HDTV (16:9, 1:1)
   1280 x  720p at  60Hz - HDTV (16:9, 1:1) [Native]
   1920 x 1080p at  60Hz - HDTV (16:9, 1:1)
   1920 x 1080p at  50Hz - HDTV (16:9, 1:1)
   NB: NTSC refresh rate = (Hz*1000)/1001

CE audio data (formats supported)
  LPCM    3-channel, 24-bits          at 44/48 kHz

CE speaker allocation data
  Channel configuration.... 3.0
  Front left/right..... Yes
  Front LFE..... No
  Front center..... Yes
  Rear left/right..... No
  Rear center..... No
  Front left/right center.. No
  Rear left/right center... No
  Rear LFE..... No

CE vendor specific data (VSDB)
  IEEE registration number. 0x000C03
  CEC physical address..... 1.0.0.0
  Maximum TMDS clock..... 165MHz

Report information
  Date generated..... 14/07/2013
  Software revision..... 2.60.0.972
  Data source..... File
  Operating system..... 6.1.7601.2.Service Pack 1

Raw data
  00,FF,FF,FF,FF,FF,FF,00,2E,4D,00,02,01,00,00,00,0C,10,01,03,81,46,27,78,0A,D5,7C,A3,57,49,9C,25,
  11,48,4B,FF,FF,80,8B,C0,81,00,95,00,81,40,81,80,90,40,B3,00,A9,40,01,1D,00,72,51,D0,1A,20,6E,28,
```

55,00,7E,88,42,00,00,1A,28,3C,80,A0,70,B0,23,40,30,20,36,00,06,44,21,00,00,1A,00,00,00,FC,00,56,
53,2D,31,36,48,44,42,53,54,0A,20,20,00,00,00,FD,00,32,55,1F,5E,11,00,0A,20,20,20,20,20,20,01,D3,
02,03,1A,71,47,11,13,05,14,84,10,1F,23,0A,06,04,83,05,00,00,65,03,0C,00,10,00,8C,0A,D0,8A,20,E0,
2D,10,10,3E,96,00,58,C2,21,00,00,18,01,1D,80,18,71,1C,16,20,58,2C,25,00,C4,8E,21,00,00,9E,01,1D,
80,D0,72,1C,16,20,10,2C,25,80,C4,8E,21,00,00,9E,01,1D,00,72,51,D0,1E,20,6E,28,55,00,C4,8E,21,00,
00,1E,01,1D,00,BC,52,D0,1E,20,B8,28,55,40,C4,8E,21,00,00,1E,00,00,00,00,00,00,00,00,00,00,00,90

15.8 VGA Input Card

Monitor
- Model name..... VGA-IN2-F16
- Manufacturer..... KRM
- Plug and Play ID..... KRM040B
- Serial number..... 17056
- Manufacture date..... 2011, ISO week 48
- Filter driver..... None
- ---
- EDID revision..... 1.3
- Input signal type..... Analog 0.700,0.300 (1.0V p-p)
- Sync input support..... Not available
- Display type..... RGB color
- Screen size..... 700 x 390 mm (31.5 in)
- Power management..... Not supported
- Extension blocs..... None
- ---
- DDC/CI..... n/a

Color characteristics
- Default color space..... Non-sRGB
- Display gamma..... 2.20
- Red chromaticity..... Rx 0.640 - Ry 0.341
- Green chromaticity..... Gx 0.286 - Gy 0.610
- Blue chromaticity..... Bx 0.146 - By 0.069
- White point (default).... Wx 0.284 - Wy 0.293
- Additional descriptors... None

Timing characteristics
- Range limits..... Not available
- GTF standard..... Supported
- Additional descriptors... None
- Preferred timing..... Yes
- Native/preferred timing.. 640x480p at 60Hz (4:3)
  - Modeline..... "640x480" 25.180 640 656 752 800 480 490 492 525 -hsync -vsync
- Detailed timing #1..... 1920x1080p at 60Hz (16:9)
  - Modeline..... "1920x1080" 148.500 1920 2008 2052 2200 1080 1084 1089 1125 +hsync +vsync
- Detailed timing #2..... 1600x1200p at 60Hz (4:3)
  - Modeline..... "1600x1200" 162.000 1600 1664 1856 2160 1200 1201 1204 1250 +hsync +vsync

Standard timings supported
- 720 x 400p at 70Hz - IBM VGA
- 720 x 400p at 88Hz - IBM XGA2
- 640 x 480p at 60Hz - IBM VGA
- 640 x 480p at 67Hz - Apple Mac II
- 640 x 480p at 72Hz - VESA
- 640 x 480p at 75Hz - VESA
- 800 x 600p at 56Hz - VESA
- 800 x 600p at 60Hz - VESA
- 800 x 600p at 72Hz - VESA
- 800 x 600p at 75Hz - VESA
- 832 x 624p at 75Hz - Apple Mac II
- 1024 x 768i at 87Hz - IBM
- 1024 x 768p at 60Hz - VESA
- 1024 x 768p at 70Hz - VESA
- 1024 x 768p at 75Hz - VESA
- 1280 x 1024p at 75Hz - VESA
- 1152 x 870p at 75Hz - Apple Mac II
- 640 x 480p at 60Hz - VESA STD
- 800 x 600p at 60Hz - VESA STD
- 1024 x 768p at 60Hz - VESA STD
- 1152 x 864p at 75Hz - VESA STD
- 1280 x 1024p at 75Hz - VESA STD
- 1280 x 960p at 60Hz - VESA STD

1280 x 1024p at 60Hz - VESA STD
1360 x 765p at 60Hz - VESA STD

Report information
Date generated..... 14/07/2013
Software revision..... 2.60.0.972
Data source..... File
Operating system..... 6.1.7601.2.Service Pack 1

Raw data
00,FF,FF,FF,FF,FF,FF,00,2E,4D,0B,04,A0,42,00,00,30,15,01,03,00,46,27,78,0B,D5,7C,A3,57,49,9C,25,
11,48,4B,FF,FF,80,31,40,45,40,61,40,71,4F,81,8F,81,40,81,80,8B,C0,D6,09,80,A0,20,E0,2D,10,10,60,
A2,00,04,03,00,00,00,18,02,3A,80,18,71,38,2D,40,58,2C,45,00,10,09,00,00,00,1E,00,00,00,FC,00,56,
47,41,2D,49,4E,32,2D,46,31,36,0A,20,48,3F,40,30,62,B0,32,40,40,C0,13,00,6F,13,11,00,00,1E,00,0C

16 Communication Protocols

16.1 Protocol 3000

The **VS-1616D** can be operated using serial commands from a PC, remote controller or touch screen using the Kramer Protocol 3000.

This section describes the:

- Kramer Protocol 3000 syntax (see Section 16.1.1)
- Kramer Protocol 3000 commands (see Section 16.1.8)

16.1.1 Kramer Protocol 3000 Syntax

16.1.1.1 Host Message Format

Start	Address (optional)	Body	Delimiter
#	*device_id@*	**Message**	CR

16.1.1.2 Simple Command

Command string with only one command without addressing:

Start	Body	Delimiter
#	**Command** SP *Parameter_1,Parameter_2,…*	CR

16.1.1.3 Command String

Formal syntax with commands concatenation and addressing:

Start	Address	Body	Delimiter
#	*device_id@*	**Command_1** *Parameter1_1,Parameter1_2,…*| **Command_2** *Parameter2_1,Parameter2_2,…*| **Command_3** *Parameter3_1,Parameter3_2,…*|…	CR

16.1.2 Device Message Format

Start	Address (optional)	Body	delimiter
~	*device_id@*	**Message**	CR LF

16.1.2.1 Device Long Response

Echoing command:

Start	Address (optional)	Body	Delimiter
~	*device_id*@	**Command** SP [*Param1 ,Param2 …*] **result**	CR LF

CR = Carriage return (ASCII 13 = 0x0D)
LF = Line feed (ASCII 10 = 0x0A)
SP = Space (ASCII 32 = 0x20)

16.1.3 Command Terms

Command
A sequence of ASCII letters ('A'-'Z', 'a'-'z' and '-').
Command and parameters must be separated by at least one space.

Parameters
A sequence of alphanumeric ASCII characters ('0'-'9','A'-'Z','a'-'z' and some special characters for specific commands). Parameters are separated by commas.

Message string
Every command entered as part of a message string begins with a **message starting character** and ends with a **message closing character**.
Note: A string can contain more than one command. Commands are separated by a pipe ('|') character.

Message starting character
'#' – For host command/query
'~' – For device response

Device ID (Optional, for K-NET)
K-NET Device ID followed by '@'

Query sign
'?' follows some commands to define a query request.

Message closing character
CR – For host messages; carriage return (ASCII 13)
CRLF – For device messages; carriage return (ASCII 13) + line-feed (ASCII 10)

Command chain separator character
When a message string contains more than one command, a pipe ('|') character separates each command.

Spaces between parameters or command terms are ignored.

16.1.4 Entering Commands

You can directly enter all commands using a terminal with ASCII communications software, such as HyperTerminal, Hercules, etc. Connect the terminal to the serial or Ethernet port on the Kramer device. To enter CR press the Enter key.
(LF is also sent but is ignored by command parser).

For commands sent from some non-Kramer controllers like Crestron, some characters require special coding (such as, /X##). Refer to the controller manual.

16.1.5 Command Forms

Some commands have short name syntax in addition to long name syntax to allow faster typing. The response is always in long syntax.

16.1.6 Chaining Commands

Multiple commands can be chained in the same string. Each command is delimited by a pipe character ("|"). When chaining commands, enter the **message starting character** and the **message closing character** only once, at the beginning of the string and at the end.

Commands in the string do not execute until the closing character is entered.

A separate response is sent for every command in the chain.

16.1.7 Maximum String Length

64 characters

16.1.8 Table of Protocol 3000 Commands

Command	Short Form	Description	Permission
#		Protocol handshaking	End User
BUILD-DATE?		Read device build date	End User
CPEDID		Copy EDID data from the output to the input EEPROM	Common
DISPLAY		Valid / Invalid output	Switch
DISPLAY?		Read if output is valid	Switch
FACTORY		Reset to factory default configuration	Common
FCT-MODEL		Set model name	Common-mandatory
FCT-SN		Set Serial Number	Common-mandatory
GEDID		Read EDID data	Common
GEDID-EXT		Read EDID data from external device connected to output	Common
HELP		List of commands	Common-mandatory
IDV		Visual identify device	Common
INFO-IO?		Read in/out count	Switch
INFO-PRST?		Read max preset count	Switch
LDEDID		Load EDID data	Common
LDFW		Load new firmware	Common
LOCK-FP	LCK	Lock front panel	Common
LOCK-FP?	LCK?	GET Lock front panel	Common
MODEL?		Read device model	End User
P2000		Switch to protocol 2000	Common

Command	Short Form	Description	Permission
PROT-VER?		Read device protocol version	Common
PRST-LST?	PLST?	Read saved presets list	Switch
PRST-RCL	PRCL	Recall saved preset	Switch
PRST-STO	PSTO	Store current connections to preset	Switch
PRST-VID?	PVID?	Read video connections from saved preset	Switch
RESET		Reset device	Administrator
SIGNAL		Valid / Invalid input	Switch
SIGNAL?		Read if input is valid	Switch
SN?		Read device serial number	End User
VERSION?		Read device firmware version	End User
VID	V	Switch Video only	Switch
VID?	V?	Get Video switch state	Switch

Note: Not every command listed by the Help command is relevant to every matrix configuration.

16.2 Protocol 2000

Tables of HEX Codes for Serial Communication (Protocol 2000)

Table 12 lists the Protocol 2000[1] hex codes for switching inputs 1 through 16 to outputs 1 through 16.

Table 12: Hex Table (IN 1-16 to OUT 1-16)

	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6	OUT 7	OUT 8	OUT 9	OUT 10	OUT 11	OUT 12	OUT 13	OUT 14	OUT 15	OUT 16
IN 1	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01
	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81
	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F	90
	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81
IN 2	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01
	82	82	82	82	82	82	82	82	82	82	82	82	82	82	82	82
	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F	90
	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81
IN 3	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01
	83	83	83	83	83	83	83	83	83	83	83	83	83	83	83	83
	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F	90
	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81
IN 4	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01
	84	84	84	84	84	84	84	84	84	84	84	84	84	84	84	84
	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F	90
	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81
IN 5	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01
	85	85	85	85	85	85	85	85	85	85	85	85	85	85	85	85
	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F	90
	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81
IN 6	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01
	86	86	86	86	86	86	86	86	86	86	86	86	86	86	86	86
	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F	90
	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81
IN 7	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01
	87	87	87	87	87	87	87	87	87	87	87	87	87	87	87	87
	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F	90
	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81

1 Full details are available on our Web site at http://www.kramerelectronics.com

	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6	OUT 7	OUT 8	OUT 9	OUT 10	OUT 11	OUT 12	OUT 13	OUT 14	OUT 15	OUT 16
IN 8	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01
	88	88	88	88	88	88	88	88	88	88	88	88	88	88	88	88
	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F	90
	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81
IN 9	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01
	89	89	89	89	89	89	89	89	89	89	89	89	89	89	89	89
	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F	90
	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81
IN 10	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01
	8A	8A	8A	8A	8A	8A	8A	8A	8A	8A	8A	8A	8A	8A	8A	8A
	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F	90
	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81
IN 11	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01
	8B	8B	8B	8B	8B	8B	8B	8B	8B	8B	8B	8B	8B	8B	8B	8B
	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F	90
	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81
IN 12	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01
	8C	8C	8C	8C	8C	8C	8C	8C	8C	8C	8C	8C	8C	8C	8C	8C
	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F	90
	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81
IN 13	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01
	8D	8D	8D	8D	8D	8D	8D	8D	8D	8D	8D	8D	8D	8D	8D	8D
	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F	90
	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81
IN 14	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01
	8E	8E	8E	8E	8E	8E	8E	8E	8E	8E	8E	8E	8E	8E	8E	8E
	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F	90
	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81
IN 15	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01
	8F	8F	8F	8F	8F	8F	8F	8F	8F	8F	8F	8F	8F	8F	8F	8F
	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F	90
	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81
IN 16	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01	01
	90	90	90	90	90	90	90	90	90	90	90	90	90	90	90	90
	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F	90
	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81	81

LIMITED WARRANTY

The warranty obligations of Kramer Electronics for this product are limited to the terms set forth below:

What is Covered

This limited warranty covers defects in materials and workmanship in this product.

What is Not Covered

This limited warranty does not cover any damage, deterioration or malfunction resulting from any alteration, modification, improper or unreasonable use or maintenance, misuse, abuse, accident, neglect, exposure to excess moisture, fire, improper packing and shipping (such claims must be presented to the carrier), lightning, power surges, or other acts of nature. This limited warranty does not cover any damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Kramer Electronics to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product. This limited warranty does not cover cartons, equipment enclosures, cables or accessories used in conjunction with this product.

Without limiting any other exclusion herein, Kramer Electronics does not warrant that the product covered hereby, including, without limitation, the technology and/or integrated circuit(s) included in the product, will not become obsolete or that such items are or will remain compatible with any other product or technology with which the product may be used.

How Long Does this Coverage Last

Seven years as of this printing; please check our Web site for the most current and accurate warranty information.

Who is Covered

Only the original purchaser of this product is covered under this limited warranty. This limited warranty is not transferable to subsequent purchasers or owners of this product.

What Kramer Electronics will do

Kramer Electronics will, at its sole option, provide one of the following three remedies to whatever extent it shall deem necessary to satisfy a proper claim under this limited warranty:

1. Elect to repair or facilitate the repair of any defective parts within a reasonable period of time, free of any charge for the necessary parts and labor to complete the repair and restore this product to its proper operating condition. Kramer Electronics will also pay the shipping costs necessary to return this product once the repair is complete.
2. Replace this product with a direct replacement or with a similar product deemed by Kramer Electronics to perform substantially the same function as the original product.
3. Issue a refund of the original purchase price less depreciation to be determined based on the age of the product at the time remedy is sought under this limited warranty.

What Kramer Electronics will not do Under This Limited Warranty

If this product is returned to Kramer Electronics or the authorized dealer from which it was purchased or any other party authorized to repair Kramer Electronics products, this product must be insured during shipment, with the insurance and shipping charges prepaid by you. If this product is returned uninsured, you assume all risks of loss or damage during shipment. Kramer Electronics will not be responsible for any costs related to the removal or re-installation of this product from or into any installation. Kramer Electronics will not be responsible for any costs related to any setting up this product, any adjustment of user controls or any programming required for a specific installation of this product.

How to Obtain a Remedy under this Limited Warranty

To obtain a remedy under this limited warranty, you must contact either the authorized Kramer Electronics reseller from whom you purchased this product or the Kramer Electronics office nearest you. For a list of authorized Kramer Electronics resellers and/or Kramer Electronics authorized service providers, please visit our web site at www.kramerelectronics.com or contact the Kramer Electronics office nearest you.

In order to pursue any remedy under this limited warranty, you must possess an original, dated receipt as proof of purchase from an authorized Kramer Electronics reseller. If this product is returned under this limited warranty, a return authorization number, obtained from Kramer Electronics, will be required. You may also be directed to an authorized reseller or a person authorized by Kramer Electronics to repair the product.

If it is decided that this product should be returned directly to Kramer Electronics, this product should be properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization number will be refused.

Limitation on Liability

THE MAXIMUM LIABILITY OF KRAMER ELECTRONICS UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY. Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

Exclusive Remedy

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF KRAMER ELECTRONICS CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN ALL IMPLIED WARRANTIES COVERING THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY TO THIS PRODUCT AS PROVIDED UNDER APPICABLE LAW.

IF ANY PRODUCT TO WHICH THIS LIMITED WARRANTY APPLIES IS A “CONSUMER PRODUCT” UNDER THE MAGNUSON-MOSS WARRANTY ACT (15 U.S.C.A. §2301, ET SEQ.) OR OTHER APPICABLE LAW, THE FOREGOING DISCLAIMER OF IMPLIED WARRANTIES SHALL NOT APPLY TO YOU, AND ALL IMPLIED WARRANTIES ON THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR THE PARTICULAR PURPOSE, SHALL APPLY AS PROVIDED UNDER APPLICABLE LAW.

Other Conditions

This limited warranty gives you specific legal rights, and you may have other rights which vary from country to country or state to state.

This limited warranty is void if (i) the label bearing the serial number of this product has been removed or defaced, (ii) the product is not distributed by Kramer Electronics or (iii) this product is not purchased from an authorized Kramer Electronics reseller. If you are unsure whether a reseller is an authorized Kramer Electronics reseller, please visit our Web site at www.kramerelectronics.com or contact a Kramer Electronics office from the list at the end of this document.

Your rights under this limited warranty are not diminished if you do not complete and return the product registration form or complete and submit the online product registration form. Kramer Electronics thanks you for purchasing a Kramer Electronics product. We hope it will give you years of satisfaction.

For the latest information on our products and a list of Kramer distributors visit www.kramerelectronics.com **where updates to this user manual may be found. We welcome your questions, comments and feedback.**

Caution

Safety Warning:
Disconnect the unit from the power supply before opening/servicing.

P/N: 2900-000727 Rev: 4

Kramer Electronics, Ltd.
Web site: www.kramerelectronics.com
E-mail: info@kramerel.com
P/N: 2900-000727 REV 4